 


CHILDREN'S ELECTRIC TOY CAR

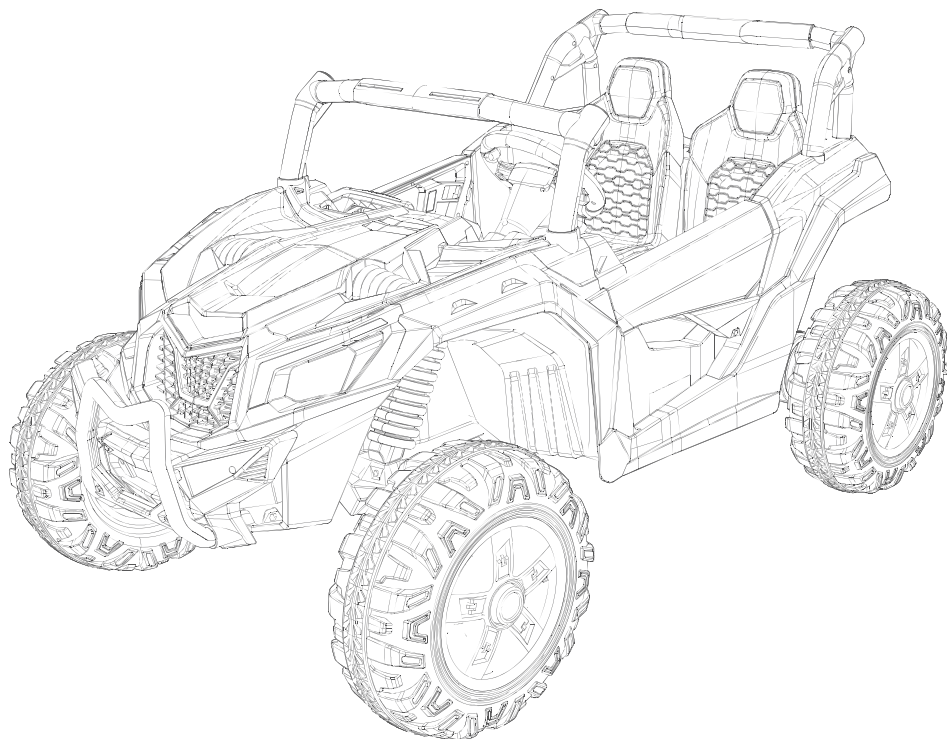

OWNER'S MANUAL

Read and understand this entire manual before using:

**Please keep this manual for future reference as it contains important information.
Before first time use, charge the battery for at least 8-12 hours, no more than 20 hours.**

Table of Contents

Would you please to read this specification carefully before installation in order to avoid operating errors or damages. Make sure that the baby will be safe . The user should safe keeping the specification.

Specification

Storage battery	12V7AH/12V10AH/24V4.5AH/24V7AH
Electric motor	12V555*2/12V555*2+12V550*2/24V555*2/24V555*2+24V550*2
Suit age	3+years
Load capacity	under 200lb
Size	1427X885X800mm
Speed	4-7km/h
Utility	8-12hours(charge),60-80minutes(Use)
Charger	AC110-240V(INPUT) DC 12V-28.8V(OUTPUT)
Battery of remote control	Two pieces of AAA 1.5V

 
 
 
 


WARNING!



FOR THE SAFETY OF YOUR CHILD, PLEASE READ ALL WARNINGS AND ASSEMBLY/USE INSTRUCTIONS. KEEP THIS GUIDE FOR FUTURE REFERENCE.

- **ADULT ASSEMBLY REQUIRED.** The product contains small parts, which are for adult assembly only. Keep small children away when assembling.
- Always remove protective material and poly bags and dispose before assembly.

Parts List

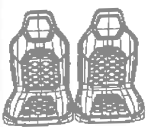PART NO	PART NAME	PICTURE	Qty (pcs)	REMARKS	PART NO	PART NAME	PICTURE	Qty (pcs)	REMARKS
1	Vehicle body		1		2	Front frame		1	
3	Front steering axle		1 (4 motor)	Two drive motors are on the axle.	4	Steering wheel		1	
5	Anti-Collision frame		1		6	Wheel		4	
7	Rear frame		2		8	Rear frame beam		1	
9	Rear axle		1		10	Seat		2	
11	M10 washer		6 (4 motor)	Placed on the rear and front axle	12	M8 Nut		8	Installed on the rear and front axle
13	Wheel cover		4		14	Spanner		2	
15	Charger		1		16	Remote control		1	
17	Instruction Manual		1						

  Parts Names (4WD)

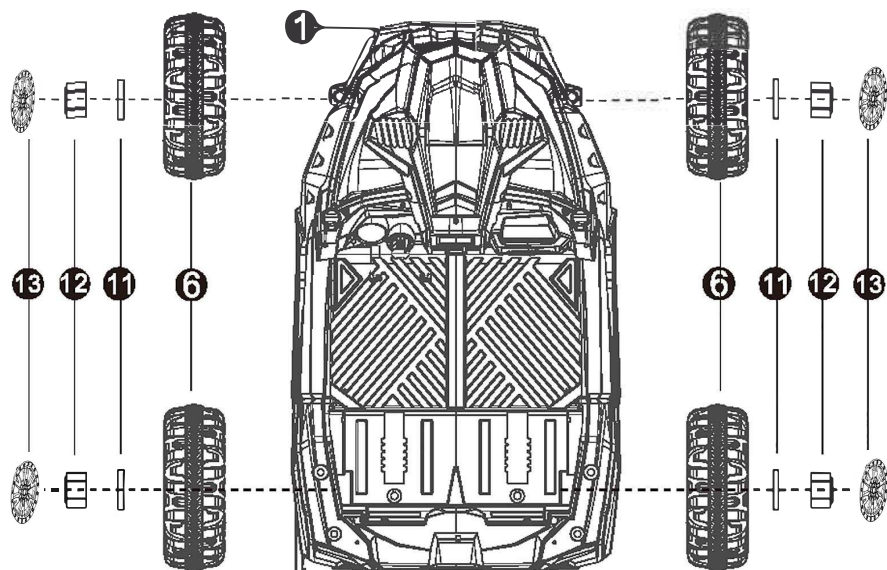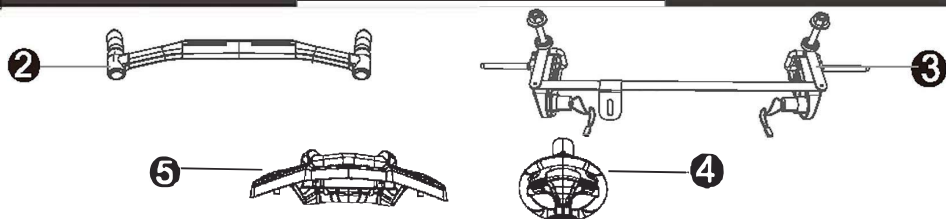


9




7



 
8

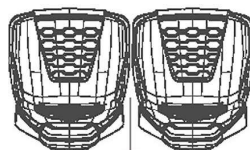

10

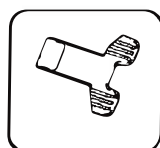 


14

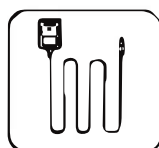 

15



 16

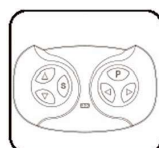


17


Assembly Steps

1. Install the Rear axle

 
- A** Rotate down and open the rear wheel frame.

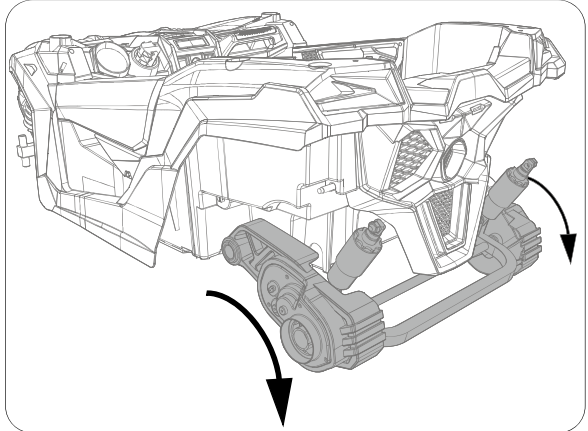

 - B** Rotate the shock absorber up to the iron shaft.

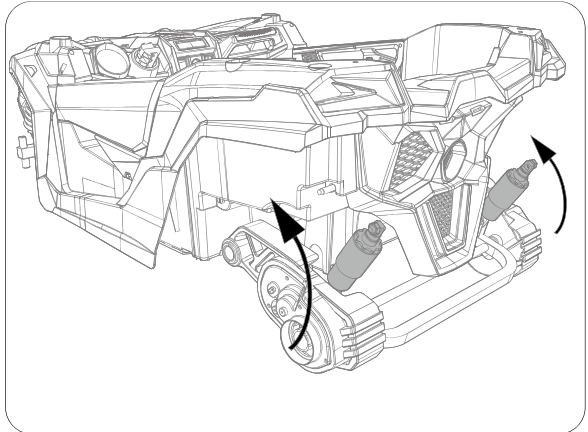


 - C** First, remove the nut from the iron shaft. Install the shock absorber into the iron shaft and then screw the nut to fix it.

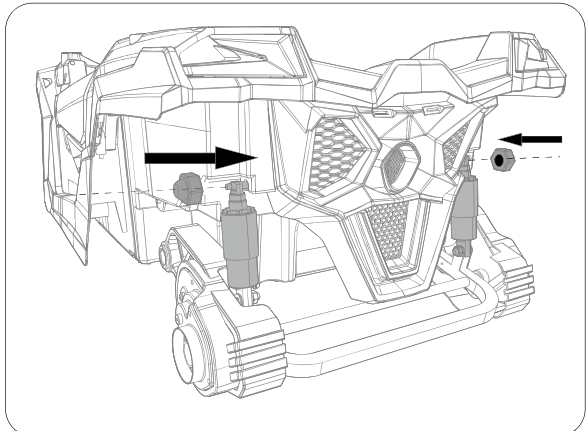


Assembly Steps

 - D** Install the rear axle into the rear wheel frame.

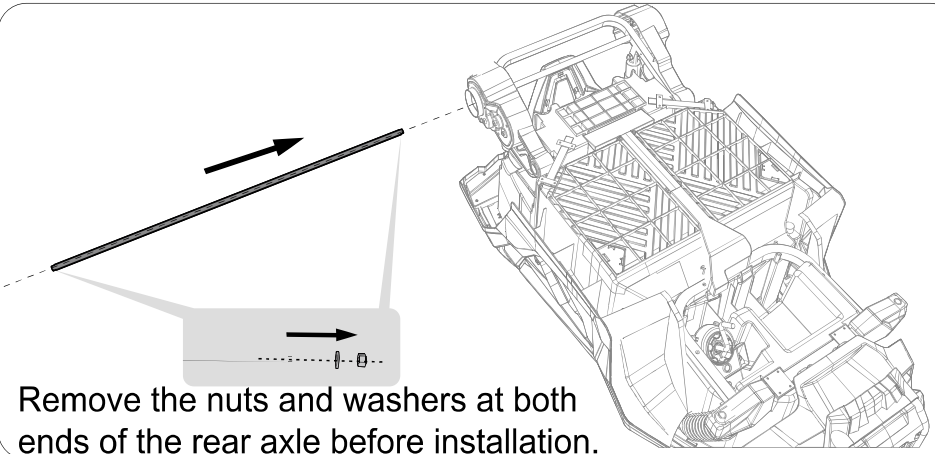

2. Install the Rear wheel





 
- Put the rear wheel on the each side of the rear axel, then put one M10 washer and fixed with one M8 nut ,finally clamp the wheel cover.

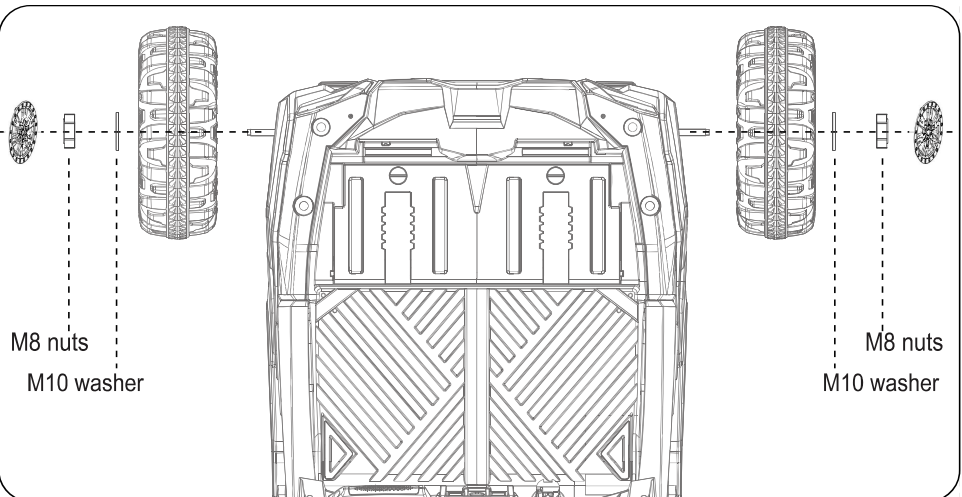


Assembly Steps (4WD)

3. Install the front wheel

     - A**
- Remove the nuts and washers at both ends of the front axle frame before installation.
 - Install the front axle frame on the car body and fix it with one M10 washer and one M8 nut.
 - Put one M10 washer at the end of the steering rod and fixed with one M8 nut.
 - Plug the connectors into each other.

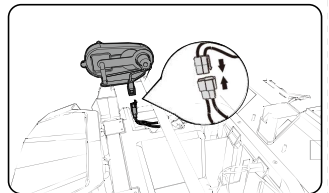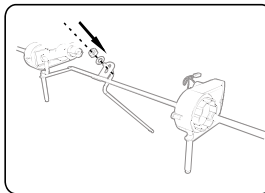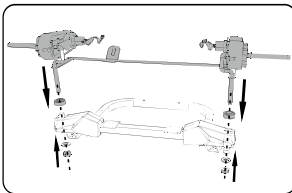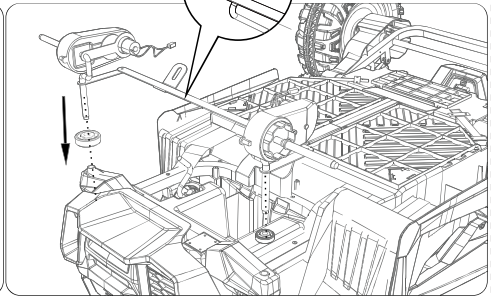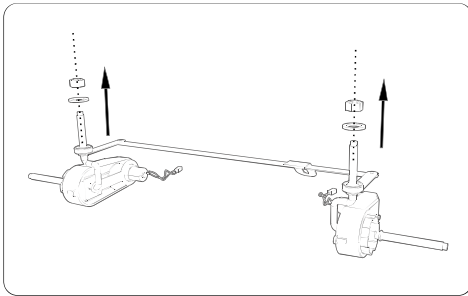

 
- B**
- Put the rear wheel on the each side of the rear axel, then put one M10 washer and fixed with one M8 nut, finally clamp the wheel cover.

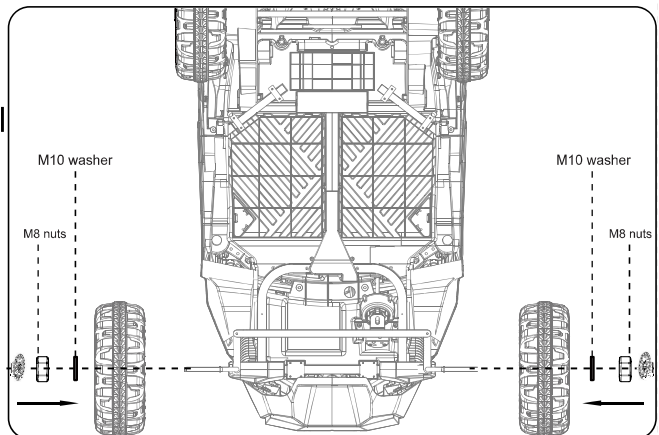

Assembly Steps


4. Install the anti-collision frame

 - Install the anti-collision frame on the vehicle body with 4pcs M4x14mm screws.

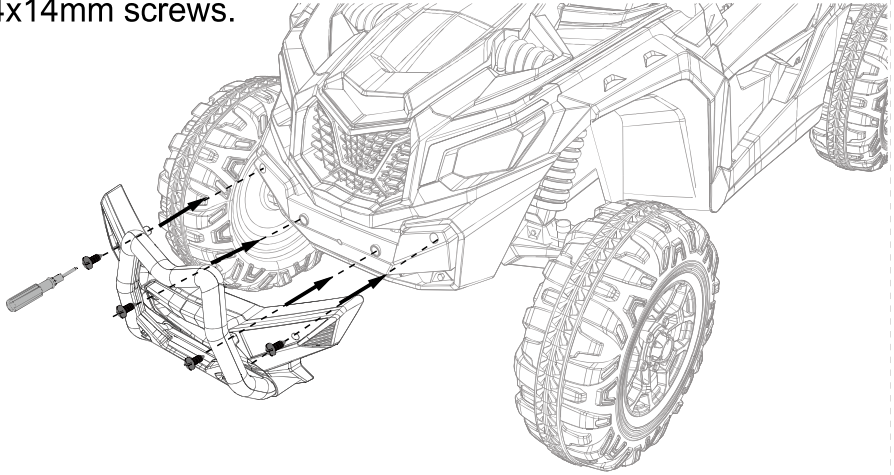

5. Install the steering Wheel

 
- Connect the plug -in of the steering wheel and body .Insert the steering wheel into the steering lever.

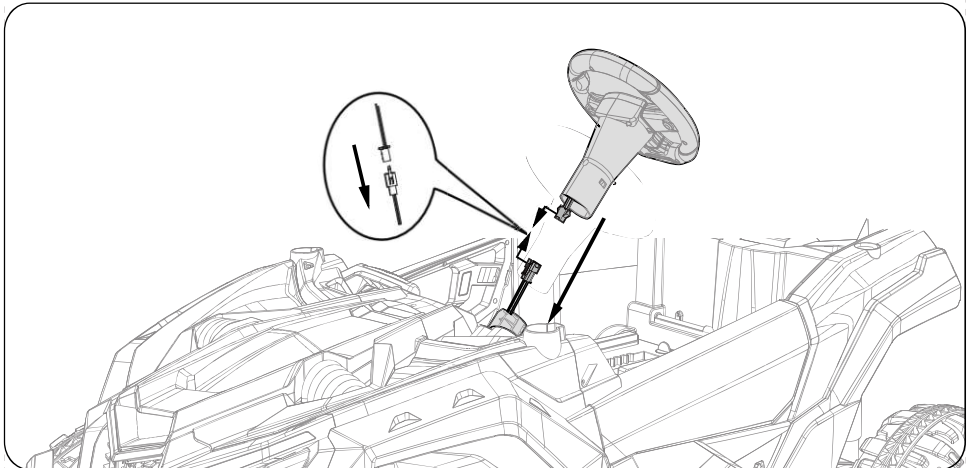

Assembly Steps


6. Install the front frame

 - Install the front frame on the body.

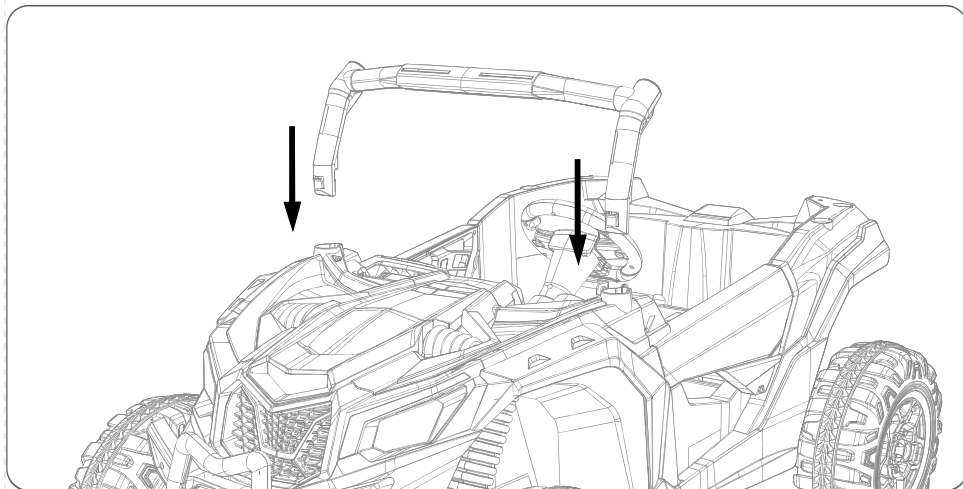


7. Install the rear frame

 - Install the rear frame and rear frame beam.

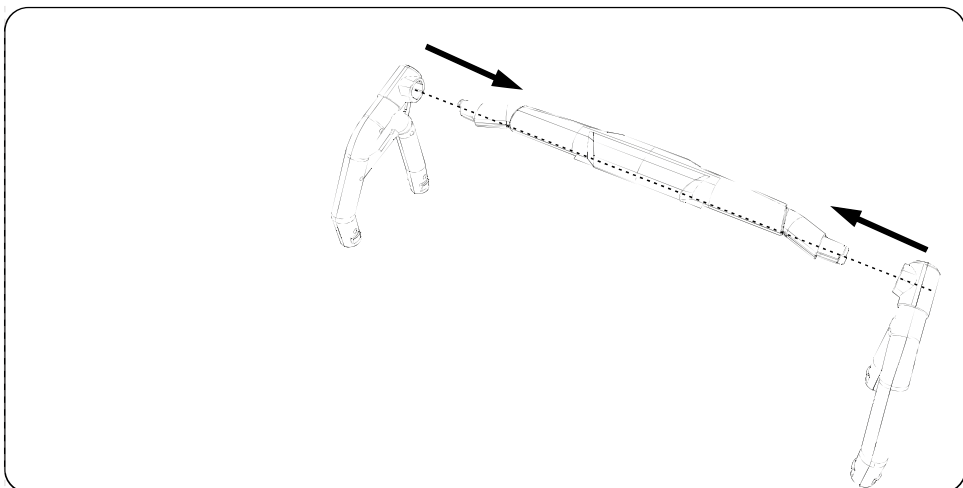


Assembly Steps

 - Install the rear frame on the body .

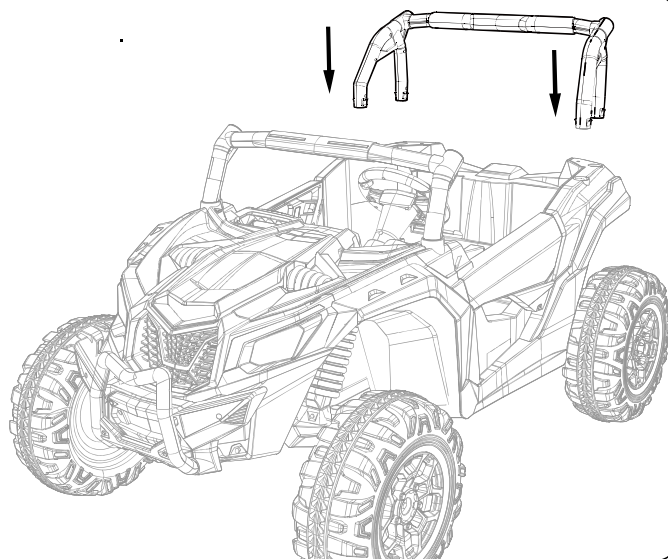


8. Install the seat

 - A** Remove four screws first.

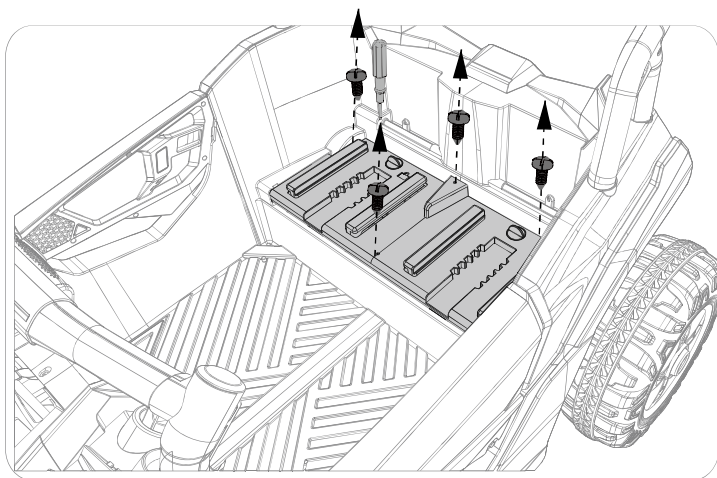


Assembly Steps

 - B** Flip to open the battery compartment cover.

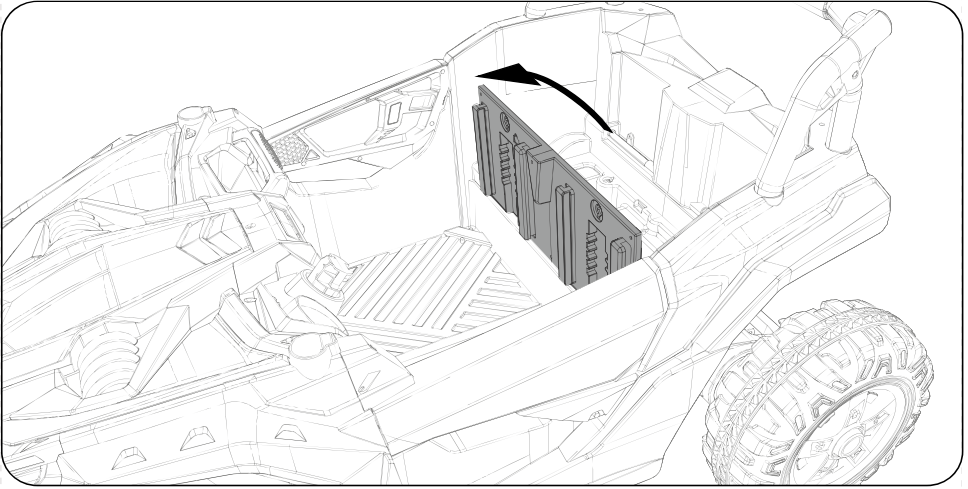

 
- C** Plug wire connector into the power connector as shown.

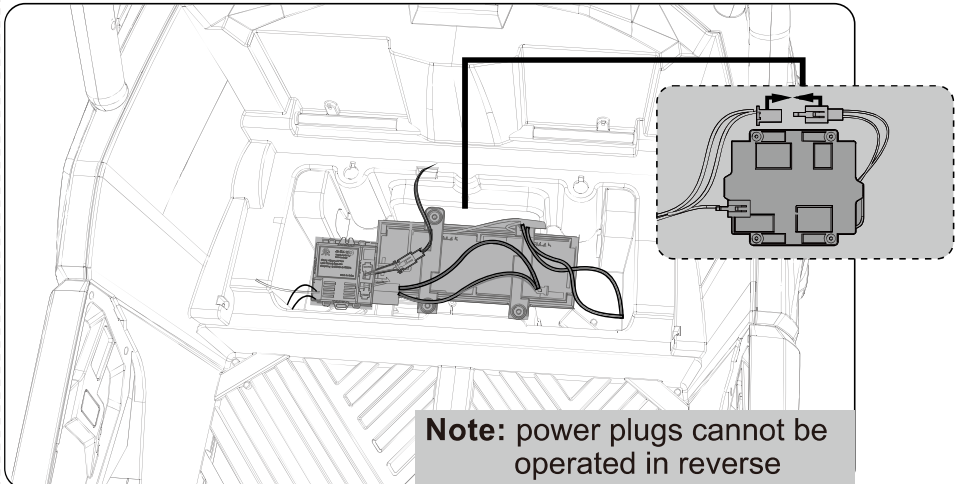


Note: power plugs cannot be operated in reverse

Assembly Steps

 - D** Fixed the cover with 4 pcs M4x20mm screws.

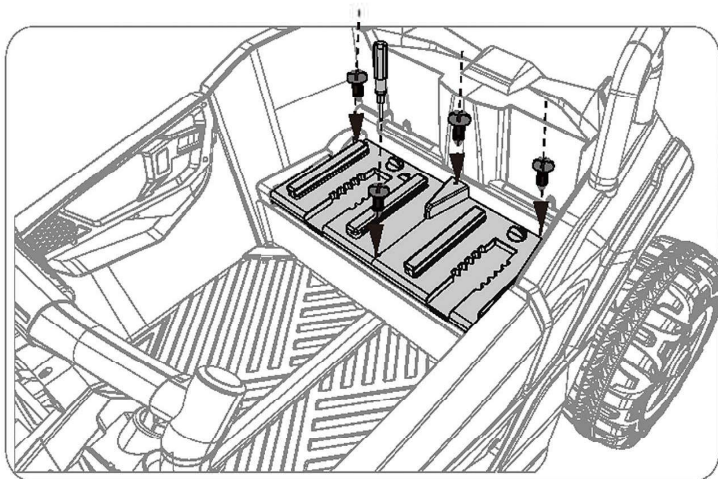


 - E** Insert the seat from the front into the guide rail on the battery compartment cover.

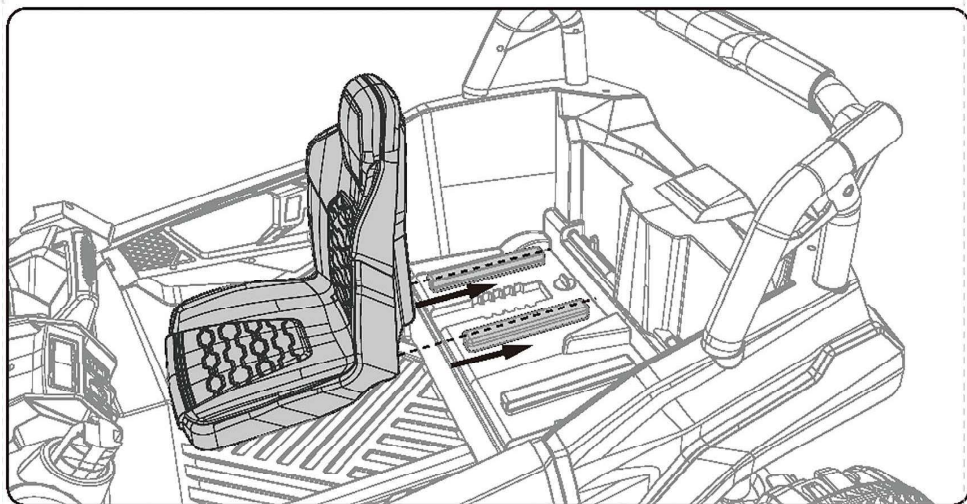

Assembly Steps

 - F** Use your hand to fasten the slot under the seat to control the front and back and forth of the seat to improve the size of the driving space.

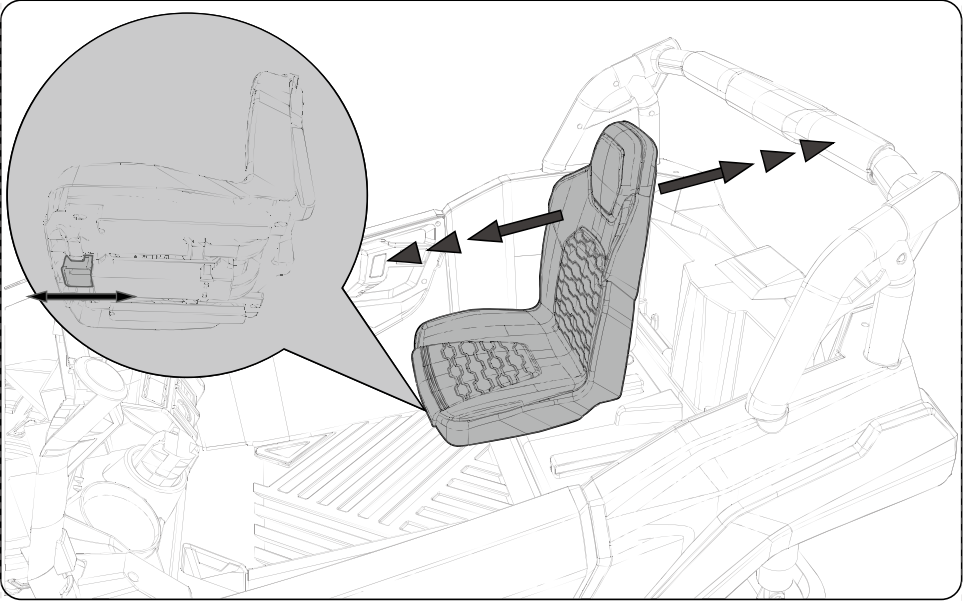

How To Operate Your Vehicle



WARNING!

PREVENT INJURIES AND DEATHS:

- **NEVER LEAVE CHILD UNATTENDED. DIRECT ADULT SUPERVISION IS REQUIRED.** Always keep child in view when child is in vehicle.
- Never use in roadways, near cars, on or near steep inclines or steps, swimming pools or other bodies of water.
- Always wear shoes.
- Always sit on the seat.
- Suitable for age 3+ years, Maximum user weight is 200lb.
- Not to be used in traffic .

Must confirm before using that following work which is already finished:

 
- **Important!** Before using the vehicle for first time, the battery needs to be charged for 8 to 12 hours, no more than 20 hours. Only an adult can charge or recharge the battery.
- Finishing the complete car to assemble according to the steps that the manual described. The plug-in package of storage battery has already been inserted well, the power has already been put through.
- All places to need the screw guarantee the screw has already been locked.

Rules for Safe Riding

READ THESE RULES ALOUD TO YOUR CHILD AND THEIR PLAYMATES AND MAKE SURE THEY UNDERSTAND THEM!

- This toy is no break. Always wear a helmet and protective clothing when riding.
- Direct Adult Supervision Required.
- Keep Children within Safe Riding Areas.
- Never driving in roadway, near motor vehicles, on lawn space, on near steep inclines or steps, swimming pools or other bodies of water.
- Use the toy only on flat surfaces. such as inside your house, garden or playground.
- Never use in the dark. A child could encounter unexpected obstacles and have an accident. Operate the vehicle only in the daytime or a well-lit area.
- It is not recommended to drive the vehicle on wet surfaces or on lopes of greater than 15 degrees.
- Do not use this vehicle outdoors when it is raining or snowing.
- Make sure you come to a complete stop before changing directions from forward to back.
- Please follow the correct weight and age limits allowed to drive this vehicle.
- It is prohibited to change the circuit or add other electric parts
- Inspect wires and connections of the vehicle periodically.
- In order to avoid accidents, please ensure the vehicle is safe before riding.
- Do not let any child touch the wheels or be near them when the car is moving .
- This vehicle has adjustable play seat belts. please instruct children how to tie the safety belt before using, guarantee the security.

How To Operate Your Vehicle

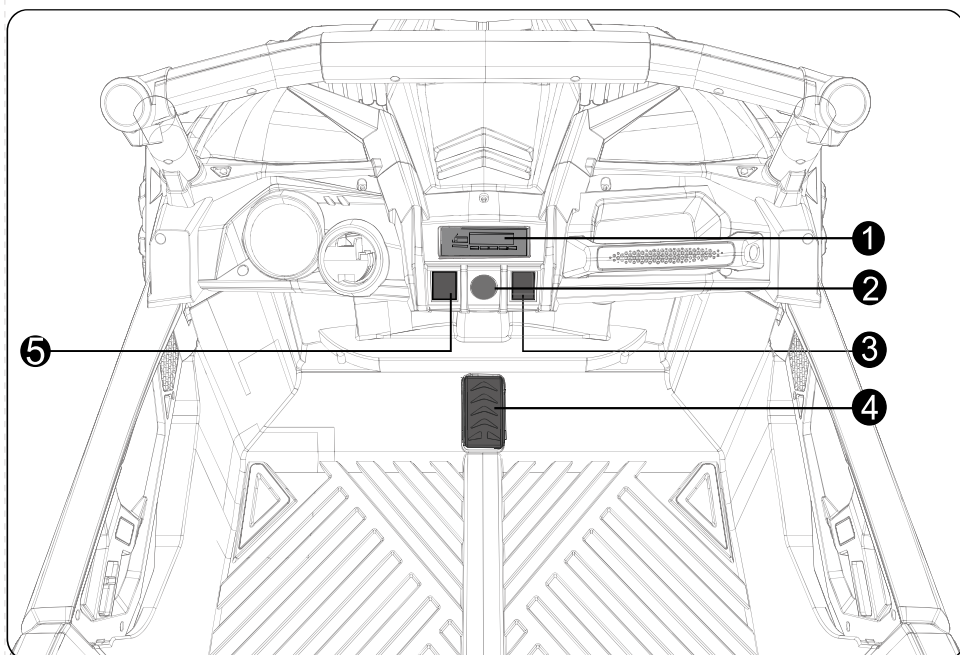

Dashboard indication

1.MP3 Player - Play music and it can connected cellphone. adjust the volume,power display,etc.

2.Power switch - Turn the vehicle on and off.

 
3.Forward/Backward switch - Change the the direction, Forward-Stop-Backward.

4.Foot switch - To move the vehicle,press the pedal down.
- To brake or slow down ,release pressure from the pedal.

5.Light/High - low speed switch -Turn on or off the light.
-Press the button to switch the high-speed/low speed function.

How To Operate Your Vehicle

How to operate a USB player

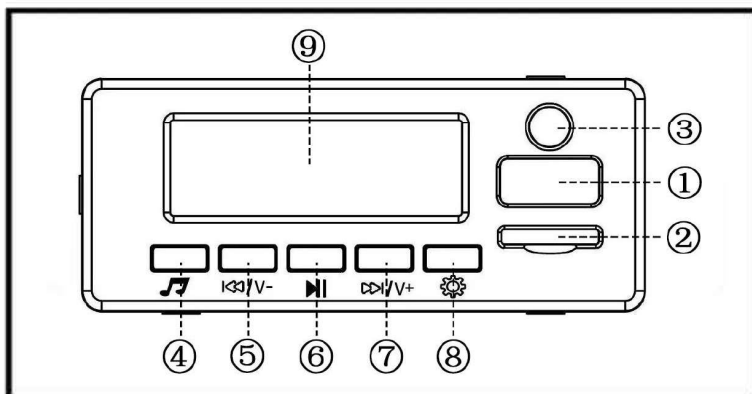

1.U solt : Insert USB terminal connect audio source,can play audio.

2.TF card slot:Insert TF card ,can play audio.

3.MP3 solt:Through the data line can be connected to other devices and play audio.

4.Music switch:Play music.

5.Previous/decrease volume:Press the button short time ,play previous song ; Press the button long time ,the volume will decrease.

6.Play/Pause: Press the button it can play and pause.

7.Next/increase volume:Press the button short time ,play next song;Press the button long time ,the volume will increase.

8.Mode Button :Press the button to change the audio input.

 
9.Power display:Clearly see the battery power ,in order to charger in time.

How to use the steering wheel button



Charging Your Vehicle

- The charging input socket is **BELOW THE SEAT**.
- The **POWER SWITCH** must be turned in **OFF** position when charging.
- Before the first use, you should charge the battery for 8-12 hours. Do not recharge the battery for more than 20 hours to avoid overheating the charger.
- When the vehicle begins to run slowly, recharge the battery.
- After each use or once a month minimum recharge time as 8 to 12 hours, no more than 20 hours.

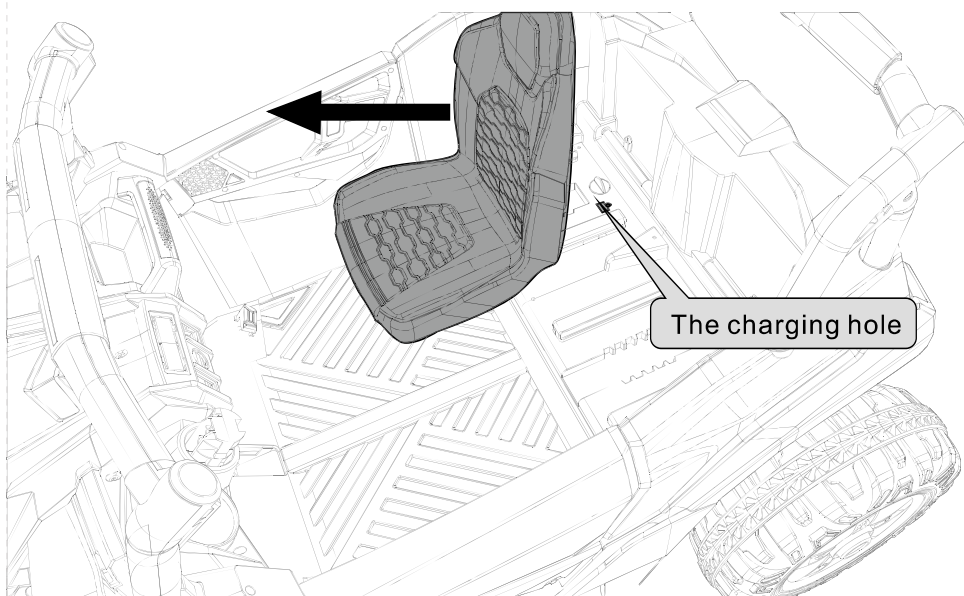


Note: Slide the seat on the right forward to see the charging hole under the seat.

Charging Your Vehicle



WARNING!

 This product with CHARGING PROTECTION:
When charging, all the functions will be cut off!

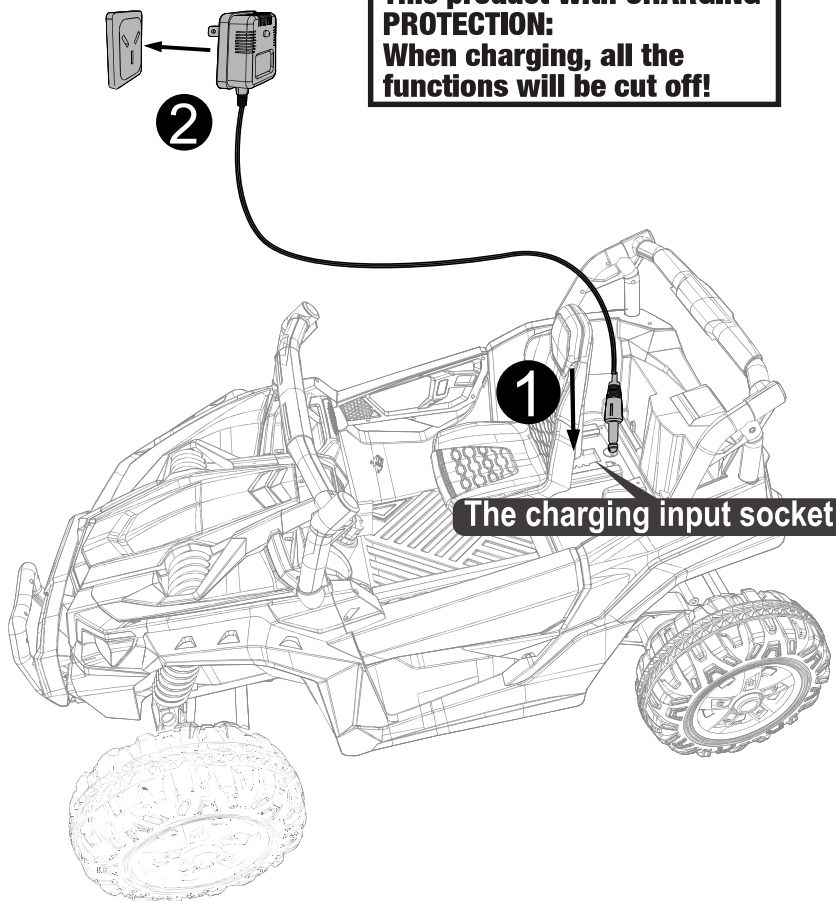

1. Find the charging input socket below the seat.
2. Plug the charger port into the input socket.
3. Plug the charger plug into a wall outlet. The battery will begin charging.

Charging Your Vehicle

WARNING!

- **PREVENT FIRE AND ELECTRIC SHOCK:**

- Do not open the charger. Exposed wiring and circuitry inside case may cause electric shock.
- Only adults may handle or charge the battery. NEVER allow child to handle or charge the battery. Battery is heavy and contains lead acid (electrolyte).
- Do not drop the battery. Permanent damage to the battery could occur or cause serious injury.
- Before charging the battery, check for wear or damage to the battery, charger, its supply cord and the connectors. DO NOT charge the battery if any damage to parts has occurred.
- Do not allow the battery to drain completely. Recharge the battery after each use or once a month if not used regularly.
- Do not charge battery upside down.
- Always secure the battery with the bracket. Battery can fall out and injure a child if vehicle tips over.
- A recommendation for adult supervision of young children.
- The toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.

WARNING!

- **Only use the charger specified by the manufacturer.**
- **Only use the battery specified by the manufacturer.**

To reduce the risk of injury, adult supervision is required. Never use in roadways• near motor vehicles• on or near steep inclines or steps• swimming pools or other bodies of water; always wear shoes. and never allow more than two riders.

 
Remote Control Operation

Remote Control Instructions

(1). Open the battery cover of remote control and load into 2 pcs AAA(1.5V)batteries.(Not included)

(2). Instructions

- a. First time use need to match code, this product has memory function
Replace battery is unnecessary match code
- b. Hold down “▲” & “▼” keys for 3 seconds start match code, The first LED flicker
- c. Turn on the car body power now, Wait for a moment, the Speed display red light stop flashing, code success.
- d. Remoter 10 seconds not run will be standby ,Press any key wake up
- e. Keys caption : “△” Forward, “▽” Back, “◁” Left, “▷” Right, “S” Speed, “P” Brake.
Press “S” key set up speed , 1 led lit up is low speed, 2 leds lit up is medium speed, 3 leds lit up is high speed, Back a car is only low speed
Press “P” key hold the brake, All LED flicker

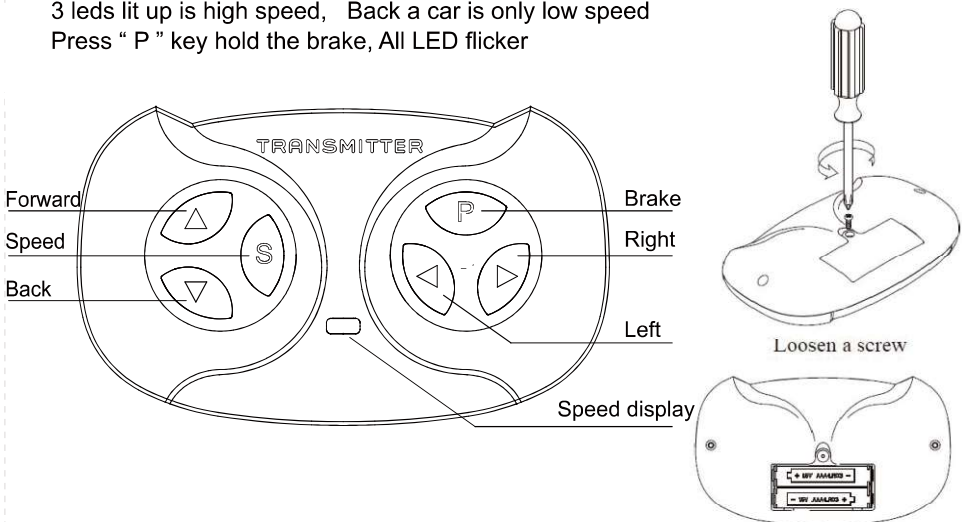

WARNING:

The remote control is not a toy. It is for the adult use only, and should not be used by a child. A close adult supervision is always required. Reception range may change significantly with weather, battery, and other environmental conditions.

When the remote control is operated, the pedal switch of the product is invalid; when the remote control is cut off, the pedal switch can be used.

Troubleshooting Guide



WARNING!

Must be assembled by an adult.

This is used by children.

To reduce the risk of injury, adult supervision is required.

Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water; always wear shoes, and never allow more than Two Riders.

Protective equipment should be worn.

Not to be used in traffic.

The toy is unsuitable for children under 3 years due to its maximum speed.

The toy should be used with caution since skill is required to avoid falls or

collisions causing injury to the user or third parties.

This toy contains batteries that are non-replaceable.



Battery Safety Warning

- Batteries can only be recharged under adult supervision.
- Rechargeable batteries should be removed from vehicle before charging.
- Different types of batteries or old and new batteries can not be combined. The battery should be placed in the correct polarity.
- Exhaust batteries should be removed from vehicle.
- Power terminals must not short -circuit.
- Dry batteries are not available.
- Non-recharge batteries are not be recharged.
- The rechargeable battery can only be charged under the supervision of the adult.

Troubleshooting Guide

 
■ PROBLEM: The vehicle does not run

PROBLEM CAUSE: The battery may low on power.

After each use, or once a month minimum, charge the battery for 8-12 hours. Do not leave the battery on the charger for more than 20 hours.

POSSIBLE CAUSE: Thermal fuse has tripped.

The vehicle is equipped with a self-resetting fuse. When the vehicle is overloaded or operated incorrectly; the self-resetting fuse will be cut off for 5-20 seconds before becoming operational again. The self-resetting fuse is under the seat (Refer to the picture.)

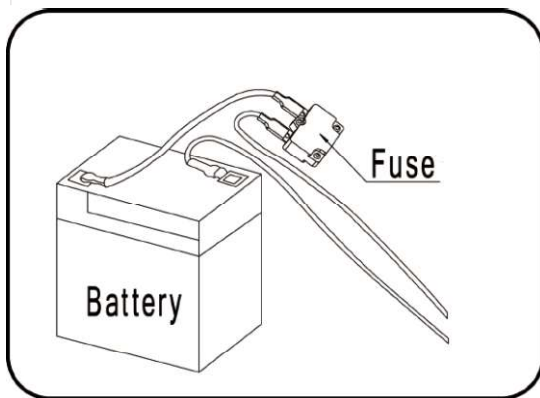

To avoid the fuse cut off the power, follow these guidelines:

DO NOT overload the vehicle, Maximum weight
The maximum weight see in the specification

DO NOT tow anything behind the vehicle.

DO NOT drive up steep slopes.

DO NOT drive into fixed objects, which may cause
the wheels to spin, causing the motor to overheat.

DO NOT drive in very hot weather, components
may overheat.

DO NOT tamper with the electric system, Doing
so may create a short circuit, causing the fuse to
trip.

POSSIBLE CAUSE: Wheel nuts are loose.

If the nuts are not tight, the wheels will not engage the forward gears. Tighten the nut with the nut wrench.

POSSIBLE CAUSE: Battery connector or wires are loose.

Make Sure the battery connectors are firmly plugged in to each other.

POSSIBLE CAUSE: Battery is dead.

Have you properly maintained the battery according to the directions? Is the battery old? Your battery may need to be replaced.

POSSIBLE CAUSE: Electric system is damaged.

Water may have corroded the system, or loose dirt, gravel or sand might have jammed the switch.

POSSIBLE CAUSE: Motor is damaged.

The motor needs professional repair.

■ PROBLEM: The battery will not recharge.

POSSIBLE CAUSE: Battery connector or adapter connector is loose.

Make sure the battery connector and adapter connector are firmly plugged together.

POSSIBLE CAUSE: Charger is not plugged in.

Make sure the charger is plugged into the wall outlet and the power flow to the outlet is on.

POSSIBLE CAUSE: Charger is not working.

Is the charger warm while charging? If not, the charger may be broken and may need to be replaced.

Troubleshooting Guide

■ **PROBLEM: The vehicle does not run very long.**

POSSIBLE CAUSE: Battery may be undercharged.

You may not be charging the battery long enough. After each use, or once a month minimum, charge the battery for 8 to 12 hours. Do not leave the battery on the charger for more than 20 hours.

POSSIBLE CAUSE: Battery is old.

The battery will eventually lose the ability to hold a charge. Depending on the amount of use, and varying conditions, the battery should operate for one to three years. Replace the battery with a new One.

■ **PROBLEM: Battery buzzes or gurgles when charging.**

This is normal and not a cause for concern. It may also be silent when charging, which is also normal.

■ **PROBLEM: Charger feels warm when recharging battery.**

This is normal and not a cause for concern.

Maintaining Your Vehicle

- It is parents' responsibility to check main parts of the toy before using. Must regularly examine for potential hazard, such as the battery, charge, cable or cord, plug, screws are fastening enclosure of other parts and that in the event of such damage, the toy must not be until that damage had been properly removed.
- Make sure the plastic parts of the vehicle are not cracked or broken.
- Occasionally use a lightweight oil to lubricate moving parts such as wheels.
- Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
- Keep the vehicle away from sources of heat, such as stoves and heaters. Plastic parts may melt.
- Recharge the battery after each use. Only an adult can handle the battery. Recharge the battery at least once a month when the vehicle Raider is not being used.
- Do not wash the vehicle with a hose. Do not wash the vehicle with soap and water. Do not drive the vehicle in rainy or snowy weather. Water will damage the motor, electric system and battery.
- Clean the vehicle with a soft, dry cloth. To restore shine to plastic parts, use a non-wax furniture polish. Do not use car wax. Do not use abrasive cleaners.
- Do not drive the vehicle in loose dirt, sand or fine gravel which could damage moving parts, motors or the electric system.
- When not using, all the electrical source should be turn off. Turn off the power switch and disconnect the battery connection.

Disposal Of Battery

Disposal Of Battery



- Your sealed lead-acid battery must be recycled or disposed of in an environmentally sound manner.
- Do not dispose of your lead-acid battery in a fire. The battery may explode or leak.
- Do not dispose of a lead-acid battery in your regular, household trash. The incineration, land filling or mixing of sealed lead-acid batteries with household trash is prohibited by law.
- Return an exhausted battery to your local approved lead-acid battery recycle, such as a local seller of automotive batteries.
- Contact your local waste management officials for other information regarding the environmentally sound recycling and disposal of lead-acid batteries.
- The battery must be charged only by adult .Please charge the product before using!
- The toy should not be connected to excessive powers (more than the quantity specified herein), and it should not be operated during charging process.
- Any rechargeable battery must only be charged under adult's supervision.
- Battery charger shall regularly check the wires, plugs. casing and other parts for damage and found damage should stop using and restored.
- Open the battery cover on the remote control, and put two pieces of batteries,paying attention to batteries polarity. Replace the battery cover and lock with screws (please replace the battery according to the above steps and should be done by adult) .
- All batteries should be inserted with the correct polarity.
- Non-rechargeable battery should not be charged, please remove any running-off battery from the toy.
- Do not use old and new batteries together, or mix different types of batteries.
- The battery charger used with the toy are to be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they must not be used until that damage had been repaired.

EXECUTION STANDARD :EN 71 EN62115 ASTM F963 CPSIA