


Children's Ride On Car

BRD-7588

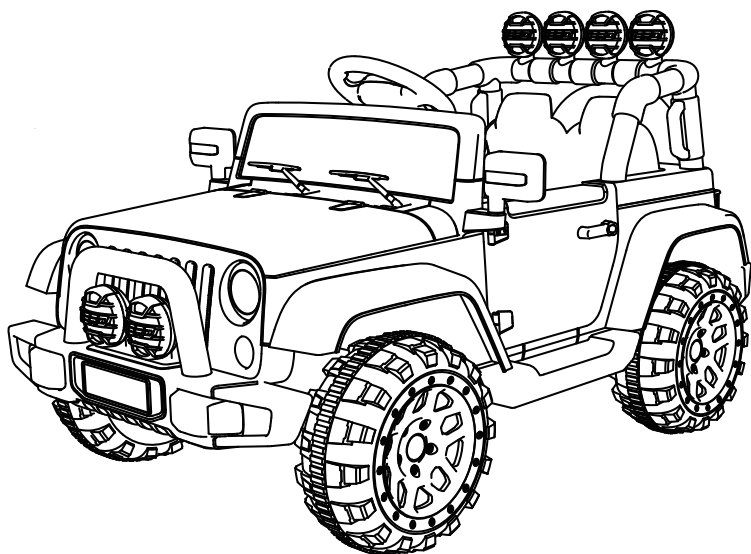

Instruction for Installation and Operation

- Please read this manual carefully before use.
- Please don't use it on the roadway for it isn't a traffic tool.
- This manual contains important information, please properly keep it for future reference.
- For product improvement purpose, part of the product structure, appearance, packing and assembly method might be changed without prior notice. If there's any difference between this manual and the product, please in kind prevail. Thanks for your understanding!

Contents

1. About This Product	Page 2
2. Assembly Parts Diagram	Page 3
3. Assembly Steps	Page 4-5
4. Operation Guide	Page 6-8
5. About Charging	Page 9
6. Troubleshooting	Page 10
7. Maintenance	Page 11
8. Battery Disposal	Page 12

About This Product


Thanks for choosing our product. We sincerely hope this product could bring happiness to your children. Please read this manual carefully before use.

SPECIFICATION	2 Motors	4 Motors
Battery	12V7AH*1/12V10AH*1	12V7AH*1/12V10AH*1
Drive Motor	RS390SP-12V RPM16000*2	RS390SP-12V RPM16000*4
Steering Motor	RS380CD-12V RPM5500*1	RS380CD-12V RPM5500*1
Charger	DC12V700mA/DC12V1000mA	DC12V700mA/DC12V1000mA
Load Weight	66 lbs	66 lbs
Working Time	1-2 hours after fully charged	1-2 hours after fully charged
Speed	1.8-2.2mph	1.8-2.2mph
Applicable Age	37-95 months	37-95 months
Dimension	120*70*70CM	120*70*70CM
Gross Weight	46 lbs	52 lbs
Net Weight	39 lbs	44 lbs
Material	PP	PP

Warning!

- For your children's safety, please read all warnings and instructions carefully before use. And keep this manual properly for future reference.
- This product should be assembled by adults only. Product contains small parts, please keep away from children when assembling.
- Remove protective material and plastic packing bags before assembly, and dispose them properly after assembly is complete.

Assembly Parts Diagram

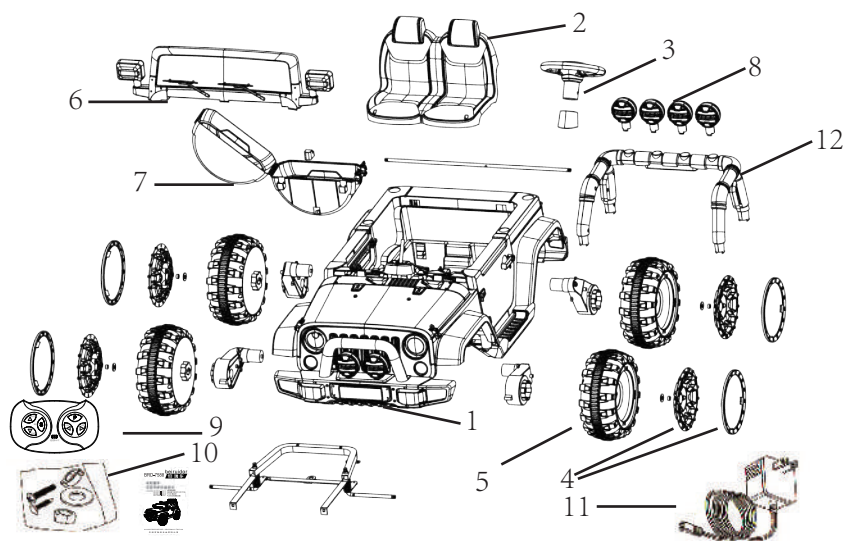


Assembly Parts List

NO.	NAME	PICTURE	QTY	NO.	NAME	PICTURE	QTY
1	Car body		1	2	Seat		1
3	Steering wheel		1	4	Wheel cap and rim		4
5	Wheel		4	6	Windshield		1
7	Rear trunk		1	8	Searchlight bar		1
9	Remote control		1	10	Hardware pack		1
11	Charger		1	12	Guardrail		1


Assembly Steps

- This product should be assembled by adults. Assembly may take 40 minutes or more. Unassembled parts might have hazardous sharp edge or tip, and contain small parts, please keep away from children.
- Please confirm all mentioned parts are included before assembly and don't dispose them until assembly is finished.
- Assembly tools needed: screwdriver (not included), pliers (not included), hammer (not included).

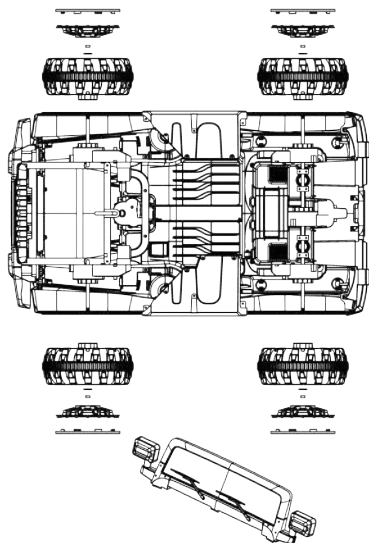

1. Install the wheels

- Turn over the car body at first.
- Distinguish the front and rear wheels. (The wheel bearing of front wheel is shorter than that of the rear wheel).
- Add a spacer on both sides of the front wheel, and fasten with M10 screw and nut.
- Then fit the wheel on the front axle and tightly cover the wheel cap.
- Fit another front wheel in the same way.
- Attach a rear wheel to the motor gear.
- Add a spacer outside the rear wheel and fasten with M10 screw and nut.
- Then fit the wheel on the rear axle and tightly cover the wheel cap.
- Fit another rear wheel in the same way.

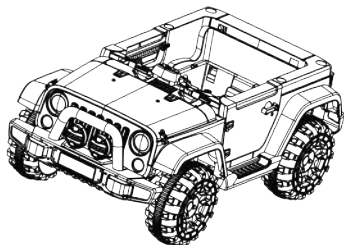


2. Install the windshield


- Stuck the windshield in the reserved slot and push down hard till it is tight.

3. Install the steering wheel

- Connect the wire connector between steering wheel and steering groove, and place it into the steering groove.
- Then fit the steering wheel into the groove, pass an M5 screw through the steering rod and tighten it with an M5 nut.

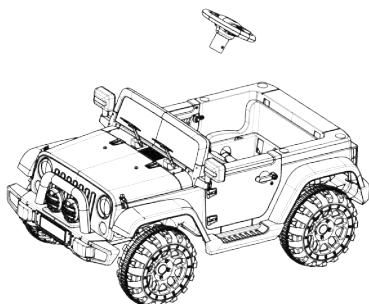


Assembly Steps

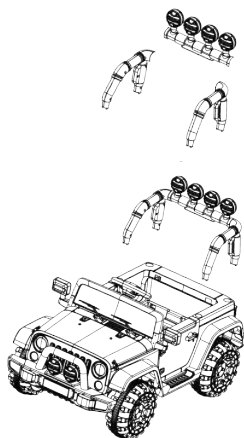


4. Install the searchlight bar and guardrail

- Connect the searchlight bar and guardrail with self-tapping screws (4*10) at first.
- Then fit the guardrail into the reserved grooves on the car.

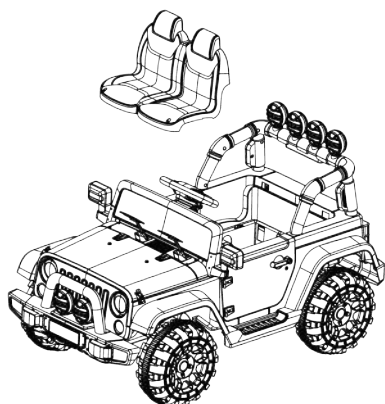

5. Install the seat


- Before install the seat, match the wiring harnesses between the battery and battery groove. Make sure the anodes and cathodes are correctly connected to avoid short circuit.
- Then fit the seat and fix with self-tapping screws (4*12).

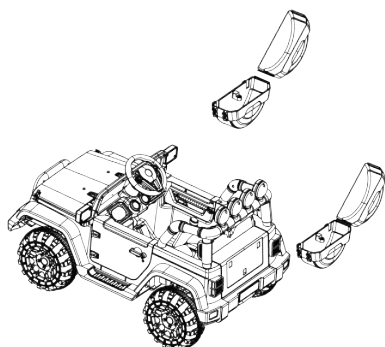

6. Install the rear trunk

- Stuck the rear trunk into the reserved slots and push hard to tighten it.

Operation Guide

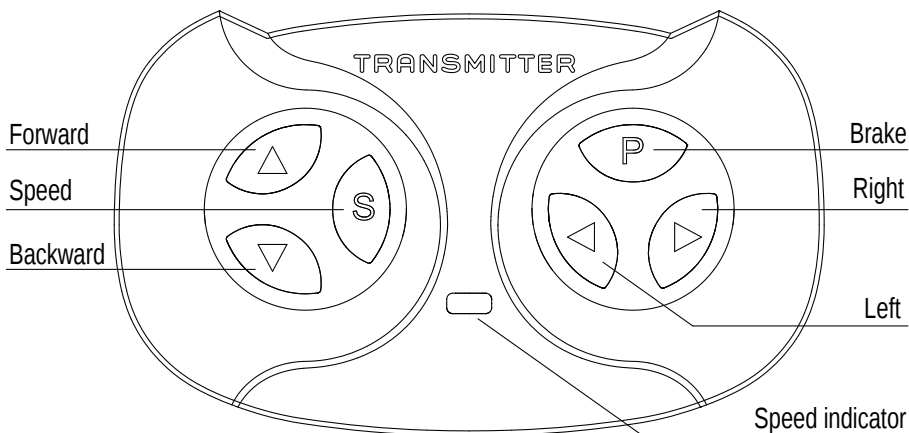

2.4G Remote Control Operation Guide

1. Insert 2 AAA batteries.
2. Turn off the power switch on the car.
3. Press and hold the Forward and Backward buttons at the same time until the indicator light flashes. Then turn on the power of the car and the indicator light stops flashing. Paired successfully.

Buttons **Speed:** Switch the product speed among high speed (3 lights on), medium speed (2 lights on) and low speed (single light on).

Forward: Control the product to go forward.

Backward: Control the product to go backward.

Left: Control the product to turn left.


Right: Control the product to turn right.

Brake: Press once to brake and lock the car, and all indicator lights flash. Press again to unlock the car.


Choking Hazard Warning! Product contains small parts.
Not applicable for children under 3 years old.

- Insert 2 AAA batteries (1.5V) as shown.
- Non-rechargeable batteries cannot be charged.
- Different models or new and used batteries cannot be used together.
- Make sure the anode and cathode of all batteries are correctly placed.

- Take the batteries out of the remote after run out.
- Short circuit is prohibited.
- Package contains important information, please properly keep it.

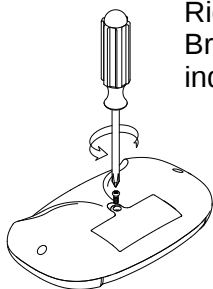

Unscrew the cover

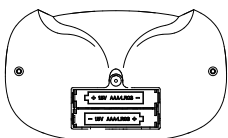

Insert 2 AAA batteries (1.5V)

Operation Guide



Warning!

Prevent injuries and personal safety accidents:

- Do not leave children alone on this product. This product should only be used under supervision of adult.
- Never use on roadways or slopes, near vehicles or swimming pools, and in other dangerous areas.
- Always wear shoes when use.
- Always sit down instead of stand up when use.
- Applicable age: 36-95 months; load limit: 66 lbs.
- Please don't use this product in the crowd.

Please make sure all the following steps have been completed before use:

- Attention! Please charge this product for 8-12 hours before first time use, no more than 20 hours. The product should only be charged by adults.
- The assembly process should be operated by adults. The power supply and circuit parts have already been assembled.
- Fix all parts and tighten all screws before use.

Safety rules for use


Please read the following safety rules for your children and their playmates and make sure they understand these rules correctly.

- This product doesn't equipped with a brake, please always wear a helmet and protective devices when use.
- This product should only be used under supervision of adults.
- Use this product in safe places.
- Never use on roadways or slopes, near vehicles or swimming pools, and in other dangerous areas.
- Use this product on flat grounds, such as indoors or in the park.
- Never use in the dark so to avoid unexpected accidents.
- It is not recommended to use this product on wet ground or on slopes exceeding 15°.
- Do not use this product outside in rainy or snowy days.
- Make sure the car is completely stop before switch between forward and backward.
- Please follow the applicable age range and load limit requests.
- It is prohibited to change the circuit or add other electric parts.
- Check the wires regularly.
- Check the product before each use to ensure the safety of children .

Operation Guide

- Do not let children stand near this product when it is moving, especially near the wheels.
- This product has adjustable seatbelt, please show your children how to use it properly. Please fasten the seatbelt when use.

Circuit diagram

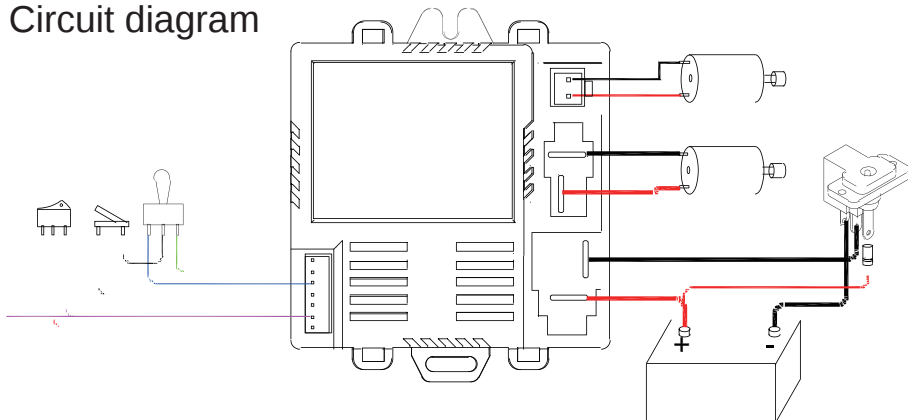

About Charging

Charging must be done by adults!



Warning!

- Prevent fire hazard and electric shock.
- Use the original rechargeable battery that comes with this product. Do not replace or refit the battery, or it may cause fire or explosion.
- Do not use the battery or charger of this product on other products, or it may cause overheating, fire or explosion.
- Do not refit the circuit of this product, that may cause a fire or explosion, or permanently damage the product.
- Do not connect the power terminals directly, otherwise fire or explosion may occur.
- Keep liquids away from charging devices.
- Do not charge this product near overheating or flammable materials since inflammable gas will be produced when charging. Charge the battery in draughty place.
- Use proper tools to take out the battery of this product. Do not remove the battery by metal wires, or it may cause a fire.
- Please charge the battery in dry place.


About Charging




Warning!

- Remove the overheated parts and wash your hands immediately.
- Do not open the battery, it contains lead and acid substances, which can cause poisoning and corrosion.
- Do not disassemble the charger. Exposed wires would cause an electric shock. Charging must be done by adults.
- Keep the battery properly. Battery drop may permanently damage it.
- Make sure the circuit and parts are in good condition before charging. Do not charge if there is any damage.
- Battery runs out is not allowed. Please charge the product timely after each time use. If not use for a long time, please charge it regularly every month.
- Battery electrode reverse is not allowed.
- Make sure the battery is well covered to avoid unexpected injury to children.
- Use this product under supervision of adults.
- To prevent children from falling and injury, please be careful when using this product.

- Please turn off the power when charging.
- Please charge this product for 8-12 hours before first time use. To avoid overheating, do not charge for more than 20 hours.
- Please charge in time if the car slowed down during normal driving.
- Please charge timely after each time use. If the product will not be used for a long time, charge it regularly every month. 8-12 hours for each time charging, no more than 20 hours.

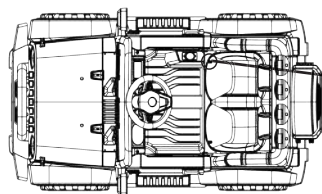

Charging port

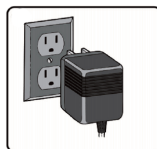

Warning!

This product is equipped with charging protection device. All functions will not be available when charging.

1. Charging port is under the seat.
2. Plug the charger in the charging port.
3. Plug the charger into the socket and start charging.

Troubleshooting


■ Problem: The product did not move

Cause: low battery.

Please charge the product timely after each time use. If the product will not be used for a long time, charge it regularly every month. 8-12 hours for each time charging, no more than 20 hours.

Cause: thermal fuse cut off.

This product is equipped with self-resetting fuse. When the product is overloaded or be operated incorrectly, the self-resetting fuse will be cut off for 5-20 seconds and can be reused after then. The self-resetting fuse is under the seat. (As shown)

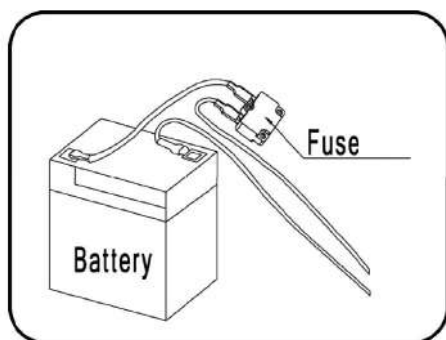

To prevent the fuse from being cut off, please refer to the following advises:
Do not overload. The maximum load weight is 66 lbs.

Do not use this product to pull things.
Do not drive on slopes.

Avoid getting the wheels in trouble, which will cause the wheels rotate at a high speed and motors overheating.

Do not use this product in hot weather; it will cause accessories overheating.
Do not change the circuit by yourself; it will cause short circuit.

Cause: screws on wheels are loose

When screws on wheels are loose, the car will not be able to go forward.
Please carefully check all wheels and make sure all screws are tightened before each time use.

Cause: battery connector is loose

Make sure the battery connects well before each time use.

Cause: battery is damaged

Make sure to replace the battery timely and insert it correctly.

Cause: circuit is damaged

Keep the product away from liquids and sands to prevent circuit damage.

Cause: motor is damaged

Needs professional maintenance.

Troubleshooting

■ Problem: battery cannot be charged

Cause: battery connector is loose

Make sure the battery connects well before each time use.

Cause: The charger is not plugged in.

Make sure the charger plugs in and power is on.

Cause: charger failure.

Does the charger get hot when charging? If not, it might have been damaged.

Please replace the charger in time.

■ Problem: battery life is short

Cause: low battery.

Please charge timely after each time use. If the product will not be used for a long time, charge it regularly every month. 8-12 hours for each time charging, no more than 20 hours.

Cause: ageing of battery

The ageing speed and degree of a battery is different according to how often it is used. Please replace the battery in time if it is ageing.

■ Problem: there's some noise when charging

It's normal.

■ Problem: heat when charging

It's normal.

Maintenance

- Adults should regularly check the parts of this product, such as battery, charger, wires, switch and others. Make sure all fixing parts are well fixed and no screw is loose. Stop using if potential risks exist until repaired.
- Make sure the plastic parts of this product are not cracked or broken.
- Lubricate the product after using a period of time to prevent rust.
- Please store the product indoors. In case of wet weather, please cover the product with waterproof cloth.
- Keep this product away from heat source, or plastic parts will be melted.
- Please charge timely after each time use. If the product will not be used for a long time, charge it regularly every month. Charging must be done by adults.
- Do not clean the product with soap and water, that will damage the motors and cause short circuit.
- Wipe clean with dry cloth. Non-waxy furniture polish can be used instead of soft cloth to wipe the plastic parts, so to achieve surface finish effect.
- Do not use this product in dangerous areas like streets, roads, slopes and gravel roads etc., so to avoid motors and circuit damage.
- Please turn off the power when not use this product. Disconnect the battery if not use for a long time.

Battery Disposal

Disposal of battery



- Storage battery can be recycled and cannot be disposed at will.
- Do not dispose the battery near the fire, it will cause explosion and leakage.
- Do not dispose the battery together with household waste. It is strictly forbidden by law to incinerate batteries and household waste together.
- Dispose used batteries into the designated dustbin or give it to a professional worker.
- Please consult the relevant institution for a reasonable way to handle the battery before dispose it by yourself.
- Charge the battery before use. Charging must be done by adults.
- Charging within the specified voltage range only. Do not operate the product when charging.
- Regularly Check the sockets, wires, charging case and other parts. Stop using the product if there is any damage.
- Remove the battery cover in back of the remote control, put in 2 AAA batteries correctly. (Batteries should be replaced by adults).
- Make sure the anode and cathode of all batteries are correct placed.
- Non-rechargeable batteries cannot be charged; take it out of product after run out.
- Different models or new and used batteries cannot be used together.
- Check the storage battery regularly; if any damage is found, please stop using it until repaired.