

Installation And Operation Manual



Model: DK-CA002S

Applicable age: 3 years +

Maximum weight: 25 KG

Execution Standard:

GB6675&GB19865 EN71&EN62115 ASTM-F963



Pinghu Dake Baby Carrier Co.,Ltd

Address:No.88,Qinsha section,Pinglang Road,Xincang Town,
Pinghu City,Jiaxing City,Zhejiang Province ,China

Website: www.daketoys.com

The BRP,Can-Am,Rotax,and Renegade trademarks,logos and designs are the intellectual property of Bombardier Recreational Products Inc.and are used under license by Pinghu Dake Baby Carrier Co.,Ltd.

Warning: This is a Child's Toy and NOT intended for Off-Road Use.

1. Spare parts list:

 
Part No.	Part Name	Part Photo	QTY (PCS)	Remarks
1	Car body		1	
2	Handlebar		1	
3	Driving wheel		1	
4	Wheel		3	
5	Seat		1	
6	Motor		1	
7	Rear axle		1	
8	Wheel cap		4	
9	M8 nut		5	
10	M10 gasket		9	
11	M4*14mm Screw		2	
12	M8 Spanner		2	

Installation steps

2. Installation steps

Step 1: Install front wheels

Install spare parts onto front axle following the sequences: M10 gasket - Wheel - M10 gasket - M10 nut - Wheel cap.

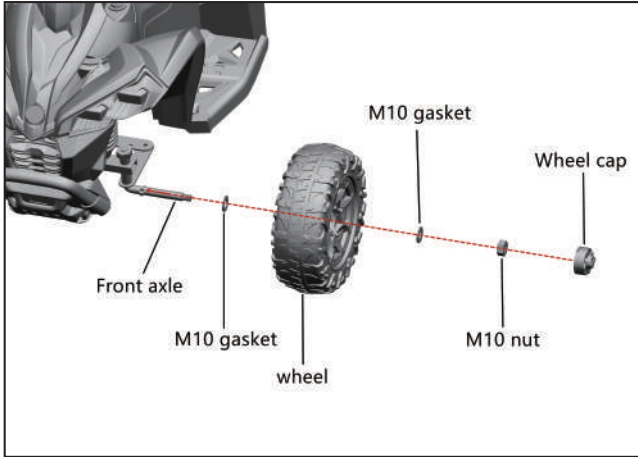


Step 2: Install rear wheels

A. Install M10 gasket and back axle from left(L) side, into the car body.

B. Left(L) side: Install spare parts onto front axle following the sequences: M10 gasket - Wheel - M10 gasket - M10 nut - Wheel cap.

 
C. Right(R) side: Install spare parts onto front axle following the sequences: Motor - Driving wheel - M10 gasket - M10 nut - Wheel cap.

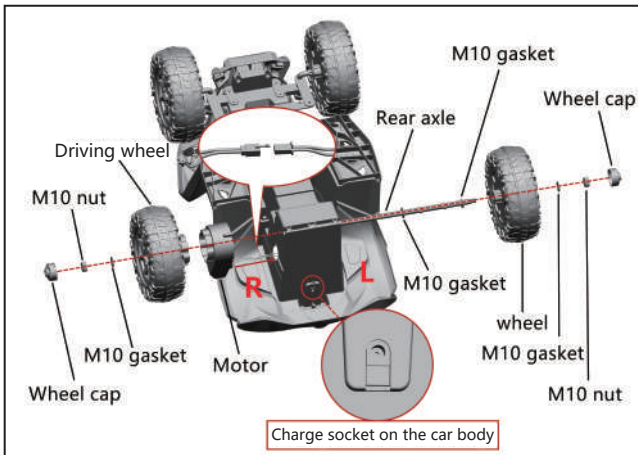

Step 3: Install handlebar


A. Connect the handlebar properly with the lines on car body, then install the handlebar onto the car body, aligning the holes of the handlebar with the steering axle. Please refer to the figure below.

 B. Use M5*33mm screw and M5 lock nut to fix.

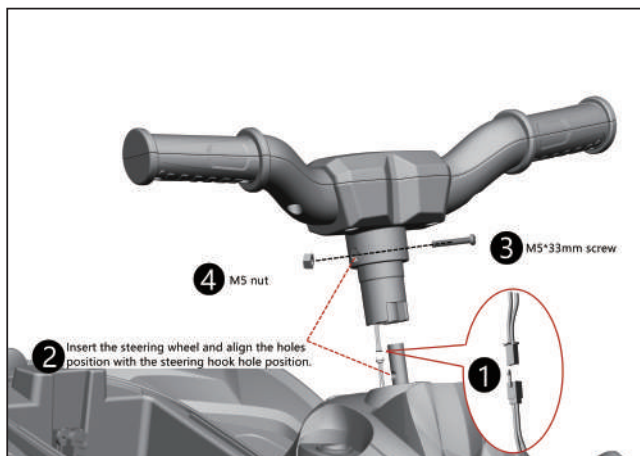

Step 4: Connect the power

 
Please connect the plug-in to the battery. Please refer to the figure below.

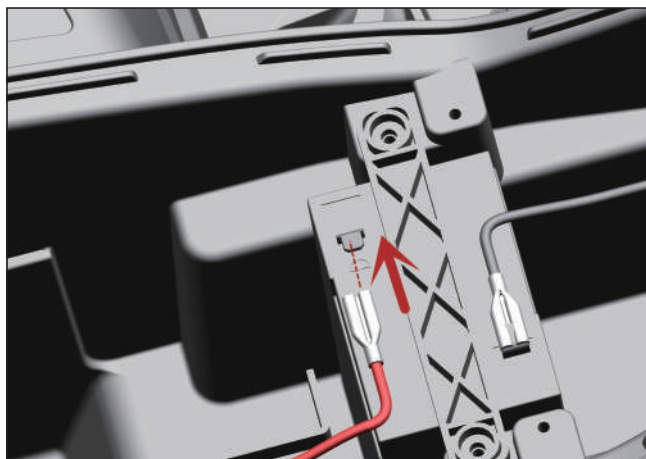


Installation steps

Step 5: Install seat

 
Install seat onto the car body, and then use 1 pc of M4*14mm screw to fix.
Please refer to the figure below.

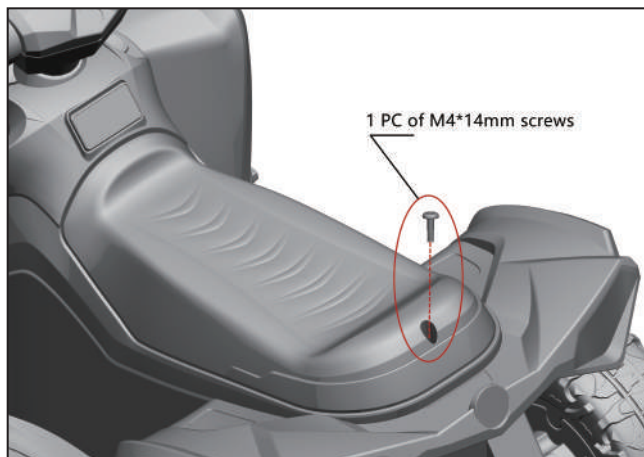

 3. Introduction for the car

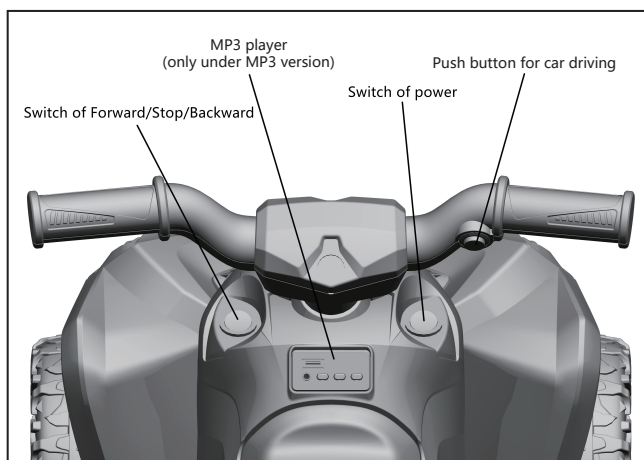

 4. Introduction for MP3

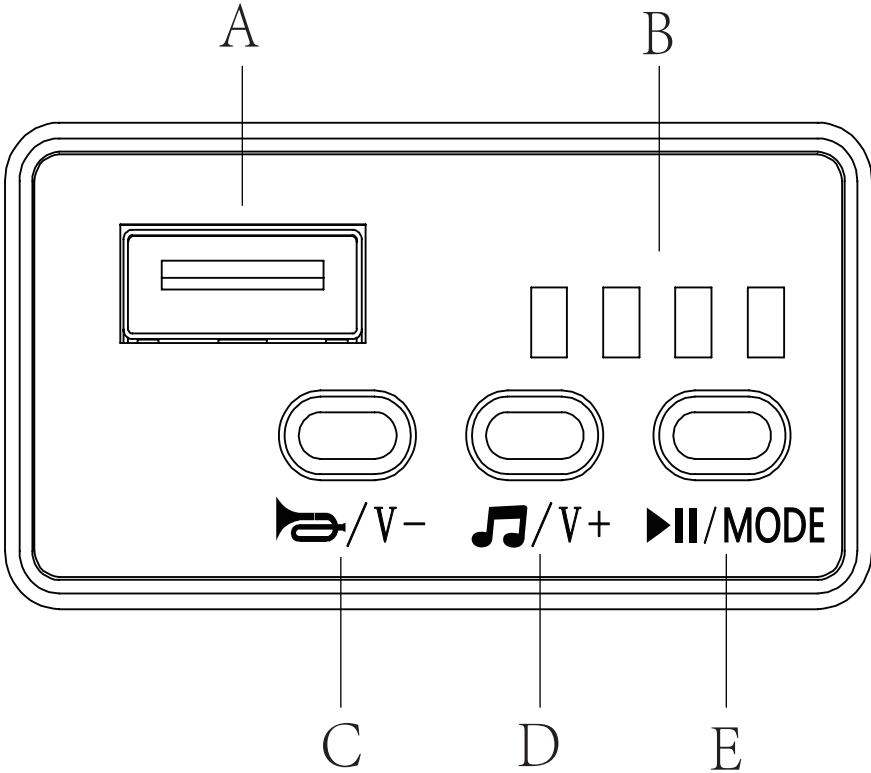

A.USB socket

B.Battery level display

C.Honk / Long press to decrease volume

D.Music / Long press to increase volume

E.Play & Pause / Long press to switch modes

Troubleshooting

Problem: The vehicle cannot be driven.

Cause of the problem: the battery is insufficient

Please charge in time after each use, and charge at least once a month.

 
It is recommended to charge for 8-12 hours, not more than 20 hours.

Problem:The car does not move.

Answer : The battery is low, please charge for 8-12 hours

but not exceeding 20 hours.

Charge at least once a month to keep the battery cells active.

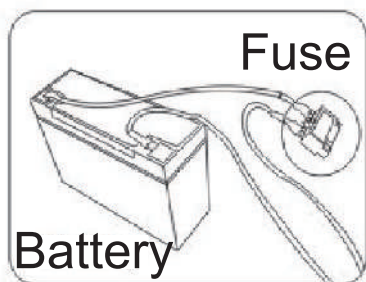

To avoid short fuse or power cut off:

1. Do not overload the product. Max load is 25 Kg.
2. Do not drag any item behind this product.
3. Do not allow water or any liquid into electric parts.
4. Do not change wire system without a professional.

TROUBLESHOOTING

Problem:The car only runs for a short time.

Answer 1: The battery is low, please charge for 8-12 hours

but not exceeding 20 hours.

Charge at least once a month to keep the battery cells active.

Answer 2: The battery may need to be replaced depending on its charging history and age.

Problem:The sound does not work.

Please ensure the volume is turned up and the MP3 line is not connected. Sounds from steering wheel will not work when MP3 is plugged in.

Problem:Charger overheating.

It is normal for battery and charger to be slightly warm during charging.

If the charger feel excessively hot, please check for a current overload or battery short circuit.

Instructions

01. While driving , adult supervision is required all the time
02. Always wear a helmet when driving
03. Please don't drive near road or on the footpath.
04. It is not recommended to drive the vehicle on wet surface or on slope greater than 15-degree.
05. It is recommended to drive this vehicle on smooth surface only.
06. Please don't drive this vehicle outdoors when it is raining.
07. Make sure that the vehicle stop completely before changing direction from forward to reverse
08. Please don't allow children to operate the charger or play with the battery
09. Clean the vehicle with a dry cloth only.
10. Please follow the correct weight and age limits allowed to drive this vehicle.
11. It is prohibited to change the circuit or add other electric parts.
12. Adults must teach their children about safe driving procedures.
13. Please turn the power off when not in use.
14. Check the seat to ensure it has been fitted and secured with a bolt before driving.
15. Inspect all wires and connection of the vehicle periodically.
16. Charging the battery should only be done by adults.
17. Charging plug is located underneath the seat.
18. In order to avoid accidents, please ensure the vehicle is safe before driving.
19. Please don't let children touch the wheels or be near them when the car is moving.
20. Please mind fingers when opening and closing doors.

WARNING:

To reduce the risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water; always wear shoes, and never allow more than 1 rider.

Warning: This toy has no brake.

Warning: This toy cannot be used in the sands.



WARNING!

For safety reasons,

*please use this vehicle under adult guidance and supervision.

*do not use this product on main roads, slopes, highways or other dangerous places.

*children must wear shoes and protective gears when operating the vehicle.

*children should be seated with the seat belt fasten when driving.

*only load a maximum of 25Kg on the vehicle.

*only children aged 3 years + should be allowed on this vehicle.

*use this toy strictly according to safety manual.

*please check the tires, breaks, steering wheels, seats and seat belts before operating vehicle.

*this toy vehicle should be used with caution and requires skill to avoid fall or collision with third parties.

*Non-rechargeable batteries are no to be recharged;

*The supply terminals are not to be short-circuited.

*Rechargeable batteries are to be removed from the toy before being charged;

*The toy should be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they must not be used until the damage has been repaired.

-Only use the battery specified by the manufacturer

-Only use the charger specified by the manufacturer.

Pictures are for reference only, please adhere to the original Products as standard

The product must be assembled by Adults.

Warning! Not suitable for children under 36 months.

Long cord. Strangulation hazard.

Pictures are for reference only, please adhere to the original products as standard

WARNING:

The car contains battery that are non-replaceable.

The instruction manual must be retained since it contains important information.

WARNING:

For the purposes of recharging the battery, only use the detachable supply unit provided with this toy,DC adaptor.

WARNING:

The remote control is not a toy. It is for adult use only, and should not be used by a child. A close adult supervision is always required. Reception range may change significantly with weather, battery, and other environmental conditions.

WARNING:

RISK OF FIRE.DO not bypass.

To ensure the safe use of this ride-on vehicle, regular maintenance is required.

1)Regular Maintenance

Regular inspection and maintenance are essential to keep the vehicle safe for use.

2)Parts to be Checked Regularly

-The following parts should be checked, maintained and, if necessary, replaced regularly:

-Wheels and wheel assemblies

-Steering wheel and steering system

-Screws, bolts and connecting parts

-Drive components

-Battery and electrical connections

3)No Unauthorized Modifications

Do not modify the product in any way other than as described in these instructions.

4)Damaged Parts

Any damaged, worn or malfunctioning parts must be repaired or replaced immediately.

5)Sharp Edges Warning

During use, sharp edges may develop due to wear or damage.

These should be removed promptly. For example, replace damaged plastic parts or covers.

6)Self-locking Parts Warning

Self-locking nuts and other self-locking fasteners may lose their effectiveness after repeated assembly and disassembly.

Please check them regularly and replace if necessary.

7)Maintenance Frequency

Check the vehicle before each use

Perform a full inspection regularly (e.g. weekly or monthly depending on frequency of use)

Description

Name	DK-CA002S
Battery	6V4.5AH / 6V7AH / 12V4.5AH
Motor	6V18000 RPM of driving motor 12V18000 RPM of driving motor
Maximum weight	25 KGS
Dimension	590*370*430 mm
Speed	3 KM/H
Charging time	8-12 hours
Applicable age	3 years +
Charger specification	Input: 220V / 110V 6V Output: DC6V800mA 12V Output: DC12V1000mA

Charging the Drive Battery:



IMPORTANT! Before using the unit for the first time the battery needs to be charged for at least **8 to 12** hours - no more than **20** hours. Once battery is depleted, recharge for **8 to 12** hours - no more than **20** hours.

IMPORTANT!

Check the drive battery and charger (supply cord, connector) for wear and damage before charging. Do not charge the battery if damage has occurred. Only replace with the same type and voltage rechargeable battery and charger supplied by the manufacturer.

- Only use the rechargeable battery (or equivalent replacement) and charger supplied with your vehicle.
- Always turn power off and charge battery after riding.
- The drive battery should be charged when depleted, or if not used regularly, once a month. Failure to charge the battery as directed will cause permanent damage to the battery and will void the warranty.

STEPS:

1. Locate Charging Port.
2. Plug Charger plug into unit Charging Port.
3. Plug Charger into Wall outlet.
4. When battery is fully charged, unplug charger from the wall outlet and disconnect from charger port.

NOTE: The charger may feel warm during the charging. If excessively hot, unplug and replace.

NOTE: This product has charging protection: When charging, all functions are turned OFF.