


Mercedes-AMG GT R

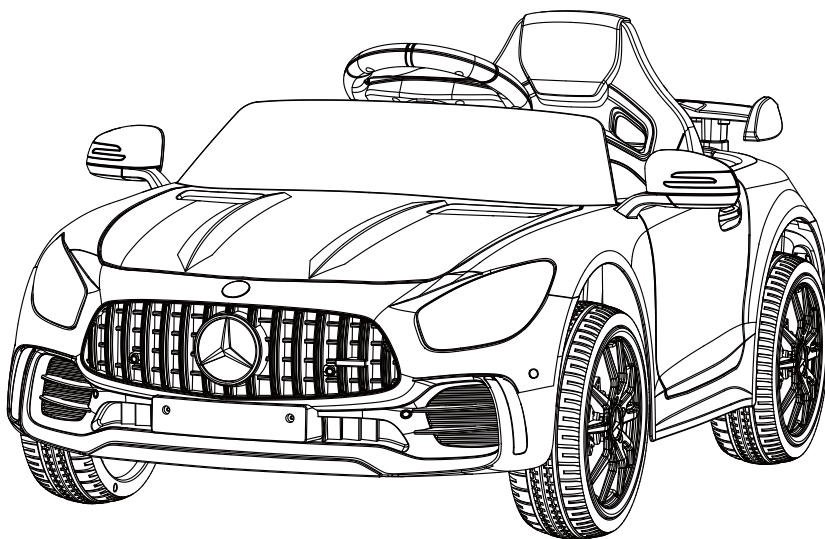

Owner's Manual

2WD



Product appearance and colors may vary from the photo.



**Please read the owner's
manual carefully.**



1 About Your New Ride-On



This Manual was written to help you and your child get the most performance, comfort, enjoyment and safety when riding your new electric ride-on toy. It is important for you to understand your new electric ride-on toy. By reading this manual before you let your child go out on his/her first ride, you will know how to get the most from your new electric ride-on toy. It is also important that you or your child's first ride be in a controlled environment, away from cars, obstacles, and other riders.

SPECIFICATIONS:

Battery:	12V4.5AHx1 or 12V7AHx1
Charger:	Input:AC100-240V 50-60Hz Output:DC 12-15V
Suitable age:	3+ years
Max Load:	25 kgs
Speed:	2.5-3.5 km/h
Product size:	99x55x41cm
Power mode:	Charging type
Charge time:	8-10 hours

WARNING!

This toy must be assembled by an adult.

WARNING!

The remote control is not a toy, and is only allowed to be operated by adults.

2 User Notice




WARNING!

- CHOKING HAZARD - Small parts. Not suitable for children under 36 months. The product contains small parts, keep children away when assembling.
- ADULT ASSEMBLY REQUIRED.
- Always remove protective material and poly bags and dispose before assembly.
- Recommended protective equipment (helmet, gloves, knee-pads, elbow-pads, etc). Protective equipment should be worn. Always wear shoes and sit in the seat when operating the vehicle.
- Only drive on level ground. Never use on the lawn.
- Keep your hands, hair, and clothes away from moving parts.
- Never leave child unattended. Direct adult supervision is required. Always keep child in view when child is in vehicle.
- To reduce the risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water, always wear shoes, and never allow more than 1 rider.
- Never use in unsafe conditions such as snow, rain, loose dirt, mud, sand, or gravel, otherwise may result in an unexpected accident such as tipping over, and could damage the electrical system or battery
- Not to be used in traffic.
- This toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.
- This toy is unsuitable for children under 36 months due to its maximum speed; Maximum load, please refer to the configuration data on the page 1.
- This toy has no brake.
- Use only battery(ies) and charger specified by the manufacturer. Using another battery or charger may cause a fire or explosion. Do not use the battery or charger for any other product.

BATTERY INFORMATION


- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- For the remote control, rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

3 Parts Diagram

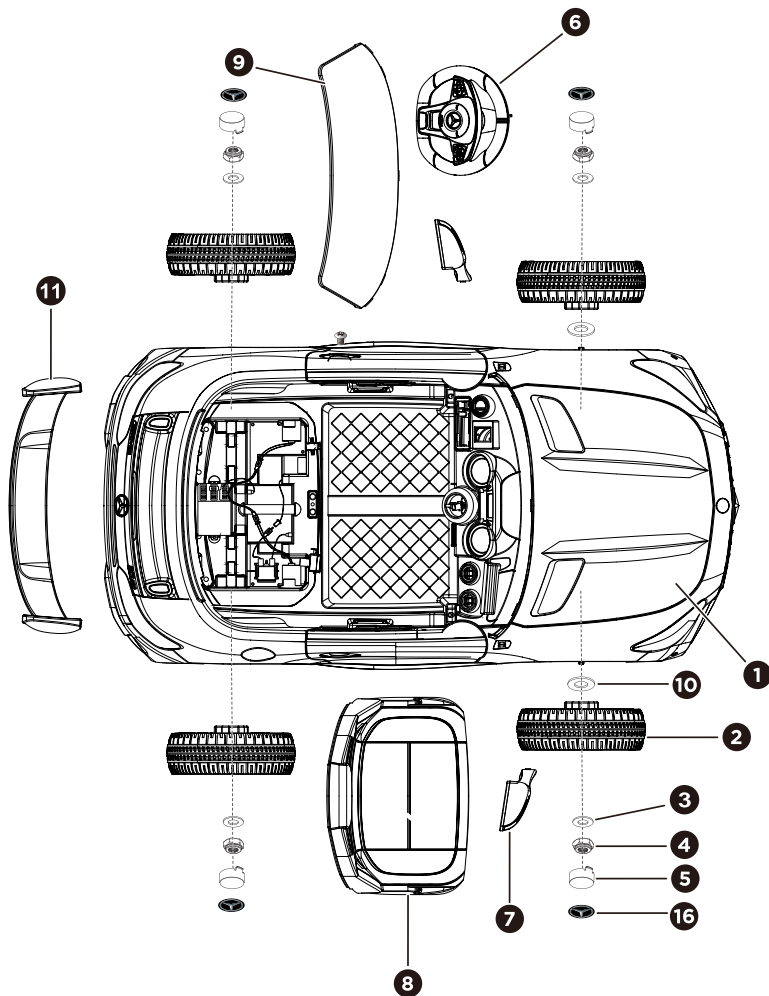

Assembly tools required:

 Socket wrench
(Included)



Screwdriver
(Not included)



Scissors
(Not included)



4 Parts List



- 1** Vehicle body
X1



- 2** Wheel
X4



- 3** M8 washer
X4



Pre-install

- 4** Nut
X4



Pre-install

 
- 5** Hub cap
X4



- 6** SteeringWheel
X1



- 7** Side mirror
X2 L & R



- 8** Seat
X1



M4X20

screw on the seat



- 9** Windshield
X1



- 10** M10 washer
X2




Pre-install


- 11** Rear spoiler
X1



- 12** Socket wrench
X2

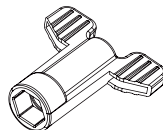


- 13** Charger
X1

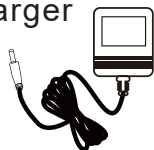

- 14** Remote control
X1



 - 15** manual
X1



- 16** Hubcap sticker
X4




5


Assembly Instruction




- Turn the vehicle body downside up. Take out the Rear spoile packed under the body.

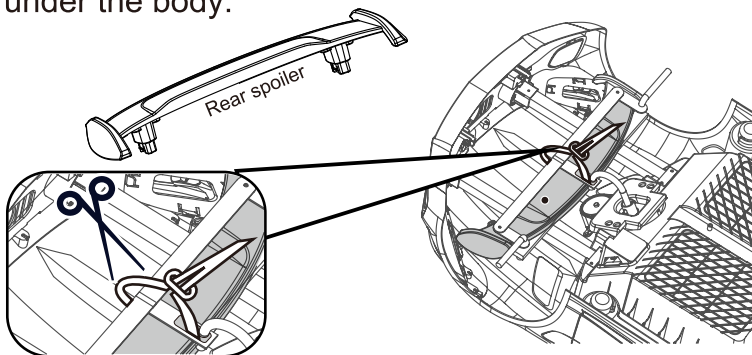

1. Slide a M10 washer onto the front axle.
2. Slide a wheel onto the front axle.
3. Slide a M8 washer onto the front axle.
4. Tighten a lock nut to the end of the front axle with a socket wrench (included)
5. "Snap" the hub cap cover to the front wheel. Repeat for the other front wheel.

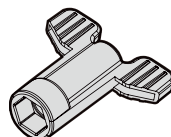

Tools required:
Socket wrench

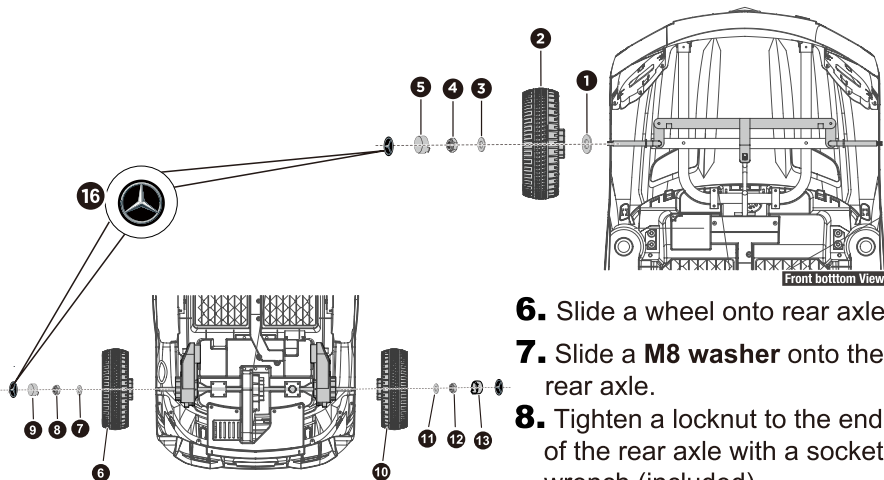

6. Slide a wheel onto rear axle.
7. Slide a **M8 washer** onto the rear axle.
8. Tighten a locknut to the end of the rear axle with a socket wrench (included).

- Finally, stick the sticker on the wheel core cover onto the wheel core cover.
9. Snap the hub caps to the wheels.
 - 10-13. Repeat steps 9-6 to assemble the other wheel to the rear axle.


6

Assembly Instruction



⚠ WARNING!



- Be sure to connect the battery plug before installing the seat.

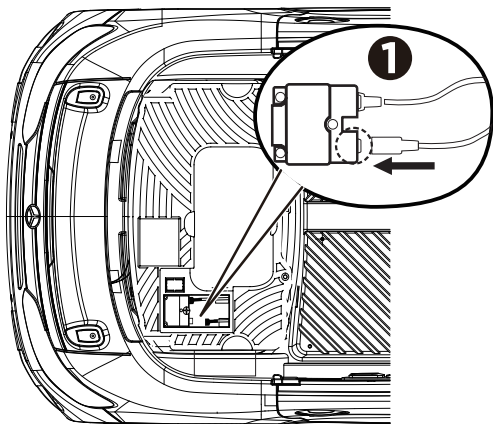

1. Connect the battery cable.
Turn on the power switch.
press the forward switch, then
press the foot pedal to test.
If the car can move properly, it
is ok.
If it can not be turn on or go
forward, please reconnect all
wires to avoid poor contact.

⚠ WARNING!

- The screws that fix the seat are already pre installed on the seat.

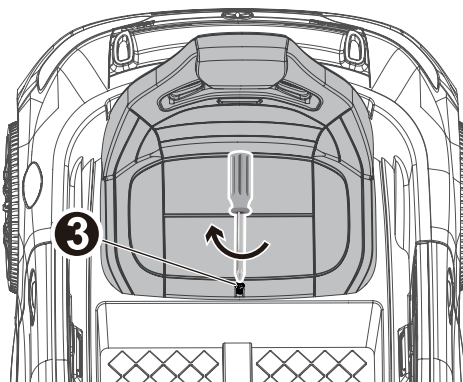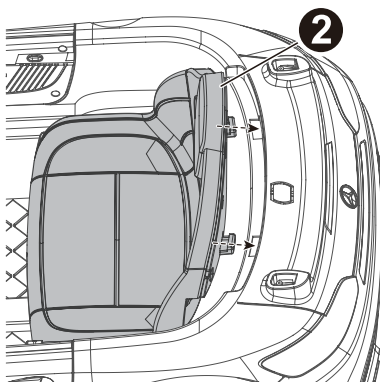




2. Fit the tabs on seat back into the holes on the body.
3. Tighten the screw on the seat

7

Assembly Instruction



- 1.** Plug the connector on the steering wheel into the connector from the steering wheel holder, and hide the plugged connectors into the hole in the steering wheel holder.
- 2.** Insert the steering wheel to the steering wheel holder, push until you hear it "click" into place.

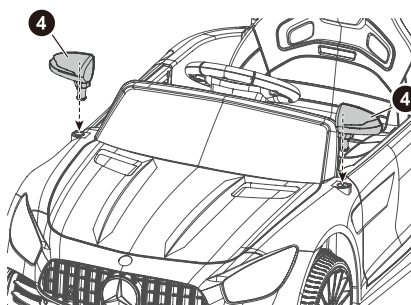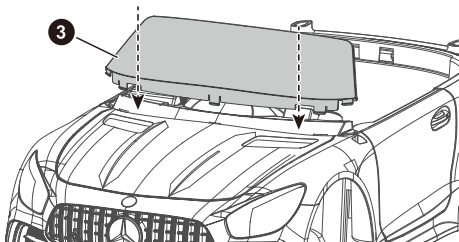
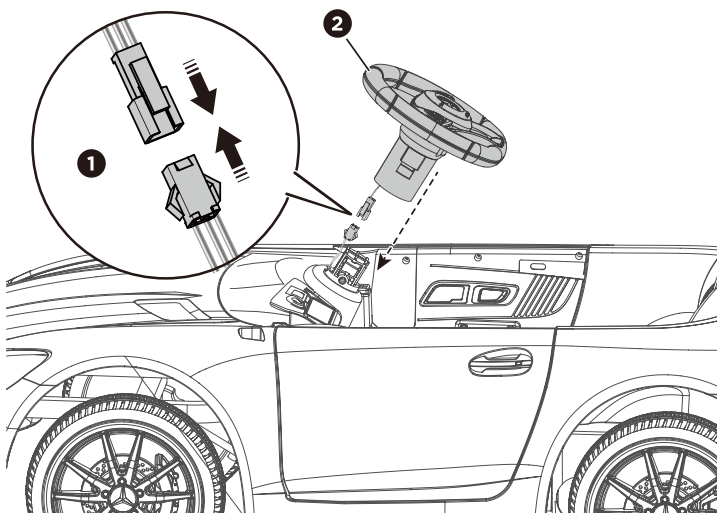


- 3.** Fit the windshield to the body.
- 4.** Fit the side mirror to body.
Press down firmly until it is assembled in place.
Repeat for the other side mirror.


8 Use



- 1.** Remove the two screws from the body.
- 2.** Insert the tabs on the rear spoiler into the holes on the seat back.
- 3.** And secure it with the two screws you just removed in step three.

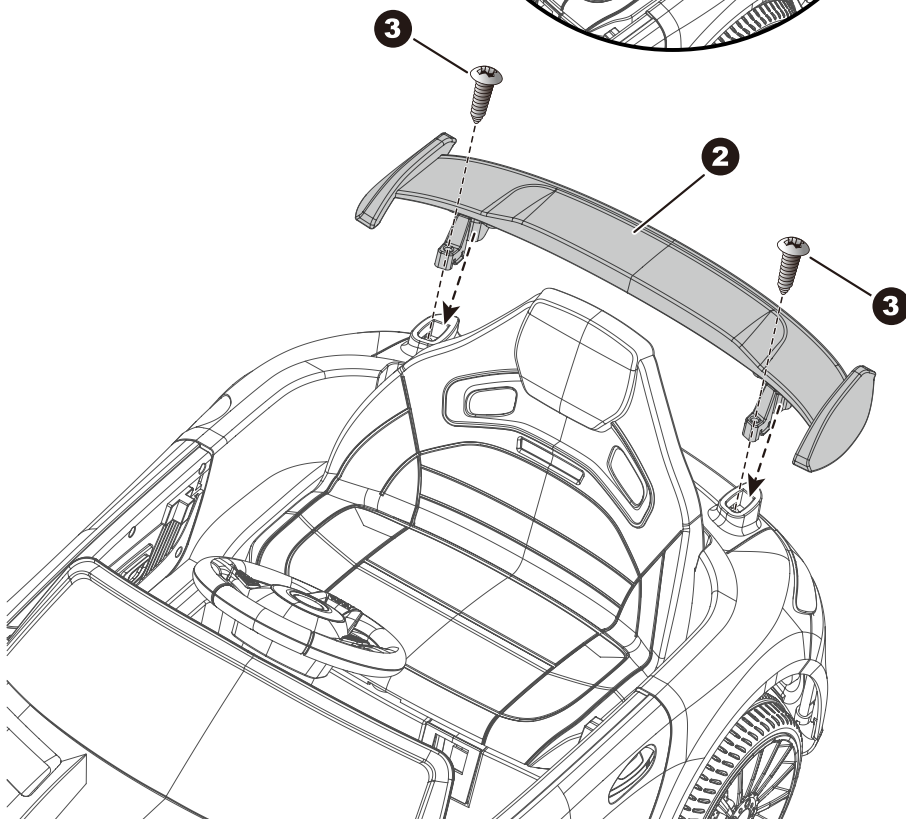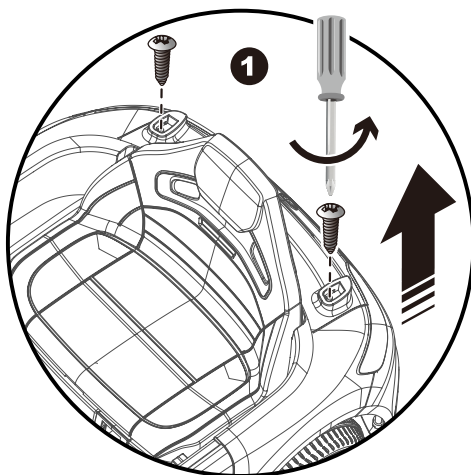

9 Use

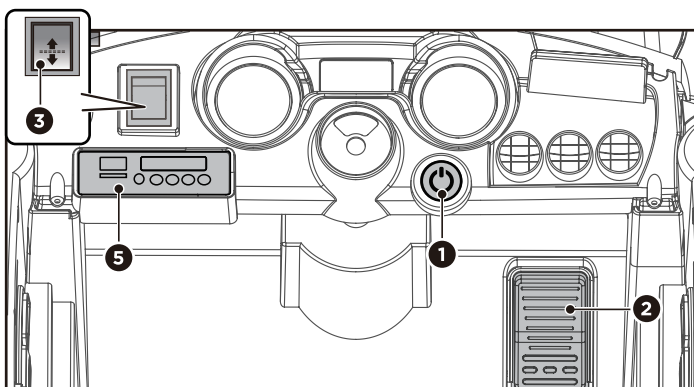

1. Power button: Turn the product on and off.


2. Foot pedal: Applies power (speed) to the product.

- To move the product, press the pedal down.
- To brake or slow down, release pressure from the pedal.


3. Forward/reverse switch: Change the direction that product moves from forward to reverse.

- To move the vehicle forward, shift the lever to top position.
- To move the vehicle backward, shift the lever to down position.

4. Sound buttons: Press for sound playing.

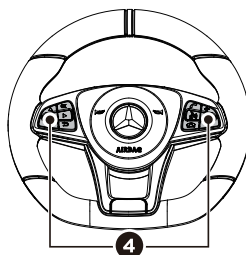

5. Player

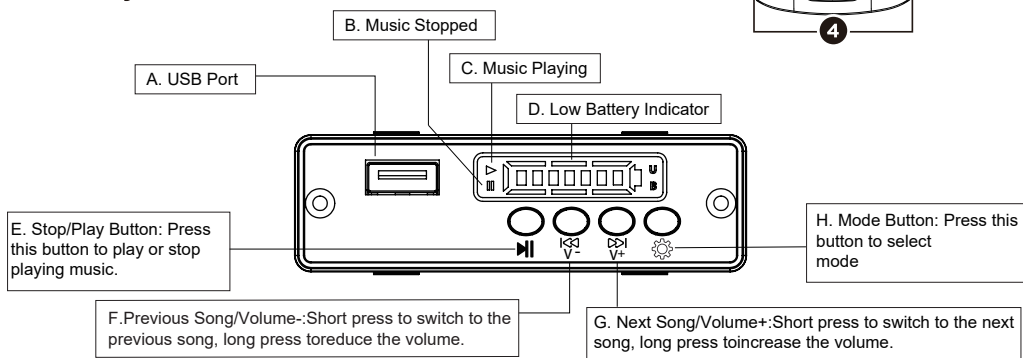

10 Use




⚠ WARNING!

- **The remote control should only be used by an adult.**

The remote control is not a toy. It is for the adult use only, and should not be used by a child. A close adult supervision is always required. Reception range may change significantly with weather, battery, and other environmental conditions.

Attach the battery to the remote control

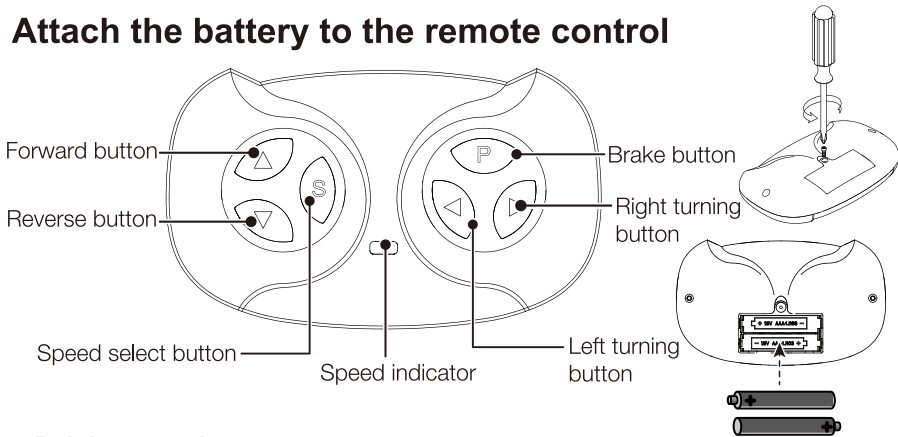

1. Build connection

- Press and hold the forward (Δ) and reverse (∇) buttons on the **controller** for 3 seconds, the speed indicator flashes, mean that the remote control is in the connected state. Then power on the **vehicle** :
- The speed indicator goes to long bright, means the connection successful.
- * If the speed indicator no response (keep flashing), means the connection failed. Turn off the remote controller (by removing the batteries) and the vehicle. And try again.

2. Brake button

Press the button to stop the vehicle, press it again to release the brake.

3. Speed select button

The switch operates the vehicle to move in low, normal and high speed.

NOTE:

- Leave the remote controller idling for about 10 seconds, it will shut down automatically.


11 Charging



⚠ WARNING!

- **ONLY an adult is allowed charge and recharge the battery!**
- **This charging protection will cut all all the functions of the vehicle when charging.**

- The vehicle must be OFF when charging.
- When the vehicle begins to run slowly, recharge the battery.
- When the product is stationary, the power indicator will tell you how much power is remaining in the battery. If only one indicator light remains, please recharge the battery.

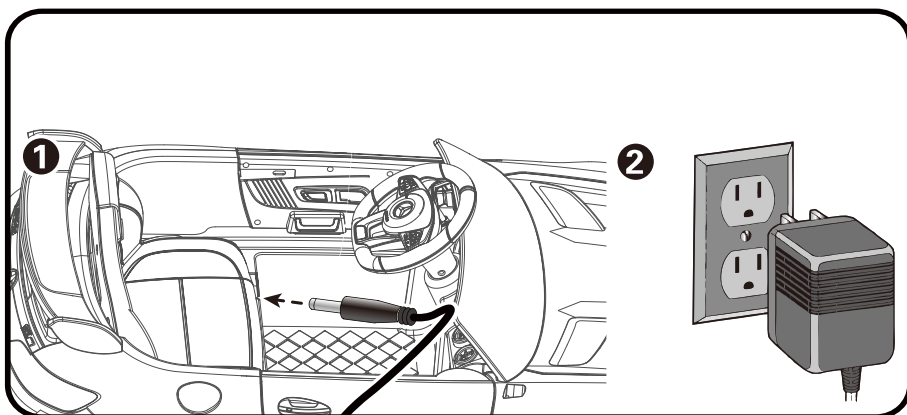

1. Plug the charger port into the input socket (the socket is below the seat).
2. Plug the charger plug into a wall outlet. The battery will begin charging.

NOTE:

- Damage to the battery may occur if it is completely drained.
- Charge the battery for about 8 - 10 hours.
- Do not charge the battery for more than 20 hours.
- **Charge the battery at least once a month even if not operating the vehicle for a long time to maximize the battery life.**
- Do not charge or store the battery upside down.
- Keep the charger and battery away from flames, sparks, or any flammables.

12 Maintaining



- It is parents' responsibility to check main parts of the toy before using, Must regularly examine for potential hazard, such as the battery, charge, cable or cord, plug, screws are fastening enclosure of other parts and that in the event of such damage, the toy must not be used until that damage had been properly removed.
- Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
- Recharge the battery after each use. Only an adult can handle the battery. Recharge the battery at least once a month when the vehicle raider is not being used.
- Do not wash the vehicle with a hose. Do not wash the vehicle with soap and water. Do not drive the vehicle in rainy or snowy weather. Water will damage the motor, electric system and battery.
- Clean the vehicle with a soft, dry cloth. To restore shine to plastic parts, use a non-wax furniture polish. Do not use car wax. Do not use abrasive cleaners.
- When not using, all the electrical source should be turn off. Turn off the power switch and disconnect the battery connection.

Fuse

The battery features a thermal fuse with a reset fuse that will automatically trip and cut all power to the vehicle if the motor, electric system or battery is overloaded. The fuse will reset and power will be restored after the unit is turned OFF for 20 seconds and then turned ON again. If the thermal fuse trips repeatedly during normal use, the vehicle may need repair. Contact after-sales service center.

To avoid losing power, follow these guidelines:

- Do not overload the vehicle.
- Do not tow anything behind the vehicle.
- Do not drive up steep slopes.
- Do not drive into fixed objects, which may cause the wheels to spin, causing the motor to overheat.
- Do not drive in very hot weather, components may overheat.
- Do not allow water or other liquids to come in contact with the battery or other electric components.
- Do not tamper with the electric system. Doing so may create a short, causing the fuse to trip.



RISK OF FIRE. Do not bypass. Replace only with a new fuse.

13 Troubleshooting Guide



Problem	Possible Cause	Solution
The car cannot move forward or backward	Battery low power	Battery charging
	Thermal fuse has triped	Reset fuse, see <Fuse>
	Loose battery connectors or wires	Check the battery connectors are firmly plugged into each other. If wires are loose around the motor, please contact after-sales service center.
	The battery is broken	Please contact after-sales for battery replacement.
	Circuit system damage	Please contact after-sales for check and maintenance.
	Motor damage	Please contact after-sales for check and maintenance.
Short usage time	The battery has not been fully charged	Check the battery connectors are firmly plugged into each other when charging
	The battery is old	Please contact after-sales for battery replacement.
Slow driving, unable to operate normally	Battery low power	Battery charging
	The battery is old	Please contact after-sales for battery replacement.
	The product is overloaded	Reduce the load capacity on the product
	Used in harsh environments	Avoid using in harsh conditions, see <User Notice>.

14 Troubleshooting Guide



Problem	Possible Cause	Solution
Vehicle need a push to go forward	Poor contact of wires or connectors	Check the battery connectors are firmly plugged into each other. If wires are loose around the motor, please contact after-sales service center.
	‘Dead Spot’ on motor	A dead spot means the electric power is not being delivered to the terminal connection and the vehicle needs repair. please contact after-sale service center.
Difficult shifting from forward to reverse or vice-versa	Attempting to shift while the vehicle is motion	Completely stop the vehicle and shift, see<Use>
There is abnormal noise during driving	The motor or gear was damaged	Please contact after-sales service center to check and repair.
The battery cannot be charged	Battery connector or adapter connector was loose	Please check the battery connectors are firmly plugged into each other.
	The charger is not being used correctly	Please check the battery charger is plugged into a working wall outlet.
	Charger damaged	Please contact after-sales service for repair.
Charger feel warm when recharging	This is normal and not a cause for concern	

Completely read through this manual and the troubleshooting guide table before calling. If you still need help for resolving the problem, please contact after-sales service center.