 


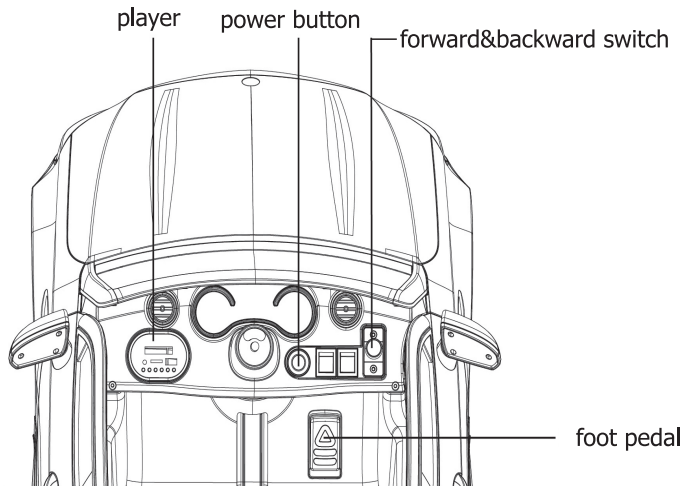

Player instruction

VOL-	short time	switch to the formal song	long time press	voice down	when open the power of the car,
SCAN	short time	pause/play			
VOL+	short time	switch to the next song	long time press	voice up	when open the power of the car,
MODE	short time	switch function			
oneside music button	short time	horn	long time press	voice down	press the horn sound, music stops
another side music button	short time	switch to the next song	long time press	voice up	

Warning!

- * For the remote control function, please take reference to the instruction in the remote control box.
- * To avoid gearbox and motor damage,ensure the vehicle has completely stopped when shift gears.
- * Running function: Set in the switch in forward state, the vehide will move forward when you stepping on "foot pedal". Set it in backward state, the vehicle will move backward. Set the switch in the middle state, the vehicle can not move. (If the car has remote control function, you can also control the car with the remote control.)

4

Remote control priority function

Please refer to the use of the remote comtrpller description
the remote control must be used under the adult's supervision.



Suitable age: For children between 36 months to 95 months old only.
(Please use this vehicle under the supervision of adults)

Warning!

For safety sake:

- *Please use this vehicle under the adult guidance and supervision.
- *Prohibited to use this product on the the road ,slopes, highway or other dangerous places !
- *When driving, children must wear shoes and helmet.
- *When driving, children should be seating in the seat and fasten the seat belt.
- *The maximum loading capacity of the vehicle is 30KGS, and can take only one child, the users must be aged 36 months to 95 months !

Charging Warning!

Warning!

To avoid fires and electric shock:

- Only allowed to use the battery and charger prescribed by the manufacturer. Prohibite to use the other brand.
- Do not put the battery and charge in other products.
- It is not allowed to change the line structure privately.
- Do not link positive terminal and negative terminal by any conductor.
- Please keep the battery dry,far away from any liquid.
- When charging, do not smoking nearby,any flames may cause explosion.
- Please charge the vehide in well ventilated, dry area.

 
Charging precautions

- * Battery can not be reversed.
- * Battery type: closed dry battery.
- * Please check the charger, battery and plug before charging. If any damage found, stop using unless repair intact.
- * It's normal for battery heating in charging process. If the temperature in too high, please check either the current flow is too strong or battery internal short-circuit.
- * To avoid likely damage caused by battery to child, must fix the battery with platen.
- * If the vehicle unused for long time, it must be fully charged, and charge once each month to ensure the battery life.
- * Batteries are only to be charged by adults or children at least 8 years old.
- * The batteries of the remote control are non-rechargeable, do not charge them.
- * Batteries should be installed with the correct polarity. Do not mixed different types of batteries or new and used batteries.Exhausted batteries must be removed from the vehicles.

5

MERCEDES-BENS

C63s CHILDREN BATTERY CAR SPECIFICATIONS

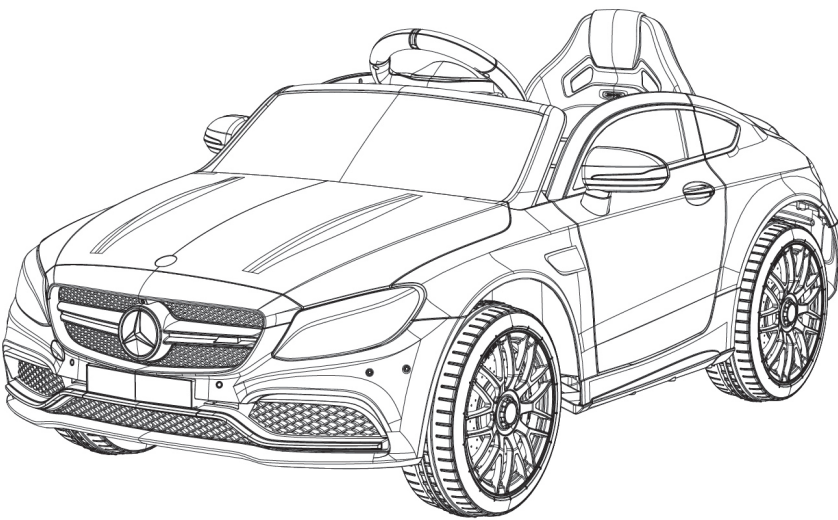

Original License Counterfeit Investigated

 
Exectue standard: GB6675 GB19865
EN71/EN62115/ASTM-F963

When charging, turn off the power switch.

After first use, recommend to charge 16 hours but not more than 20 hours.

When the vehicle speed slows down obviously, indicating the battery is low, please charge.

After use, please charge 8 to 12 hours, not exceeding 20 hours.

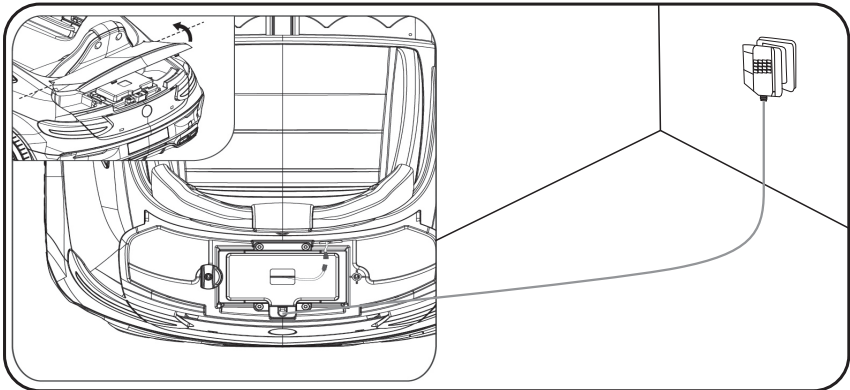

Troubleshooting


- Problem: the vehide can not move

Answer 1: it is low battery

Please charge in time after each use, charge at least once each month. Recommend to charge 4 to 6 hours but not more than 10 hours.

Answer 2: overloading

 An automatic reset fuse is equipped in the battery box. When overloading, it will cut off the power for 15 to 20 seconds, then restart.

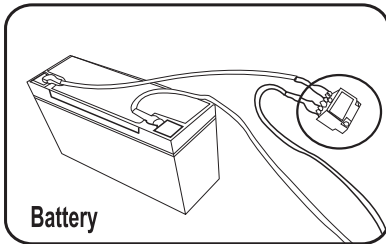

To avoid fuse cut off the power:

- 1.Max:30kgs, overload is forbidden.
- 2.Do not drag any items behind this products.
- 3.Do not allow water or other liquids dip the electrical parts.
- 4.Do not change the line system by yourself.

Answer3: battery is broken

Please contact the agent or manufacturer.
Answer4:car body wiring has been damaged
Please contact the agent or manufacturer.
Answer5:the motor is damaged.
Please contact the agent or manufacturer.

 
6

Mercedes-Benz C63s (Manual)

Welcome to use our children ride-on cars. To ensure you can use our products correctly, please read through this manual before use.

The toy must be assembled by adult.

Parts List

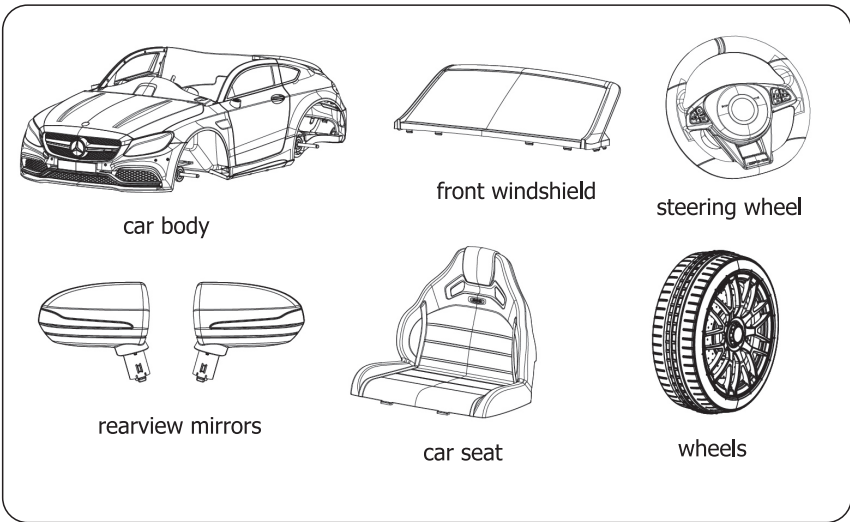

Please note the difference between front wheels and rear wheels.



front wheels



 
rear wheels




Wheel sticker:
put the sticker on
the wheel core.

2


Installation instruction

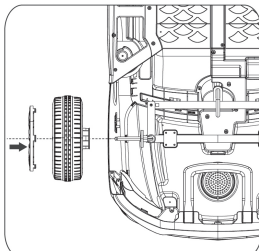

 
1. Four wheels installation
Install the tire with the front wheel axle till it is settled.Put the tire out , see if it is finally settled At last, put the wheel cover onto the tire outside.
(same method for all wheels)

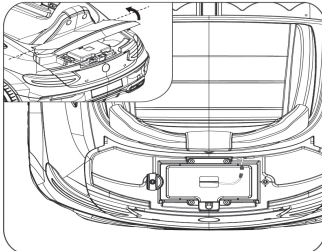

 
2.Power connection
The charging hole is in the rear trunk. Connect the power terminal port with the main line. red line connects with red line, black line connects with black line.
(note: connect the pole in correct way)

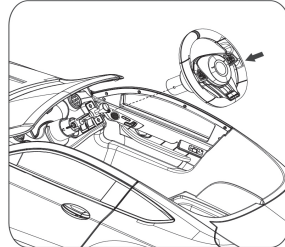

 
3.Steering wheel installation
Connect the lines, insert the steering wheel in the correct direction.Use finger to press the two steel round balls,push the steering wheel untill the ball locks in the two holes.

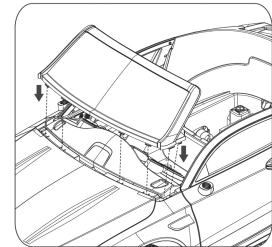

 4. Windshield installation
Insert the windshield onto the car, settle it withthe hole on the dashboard.

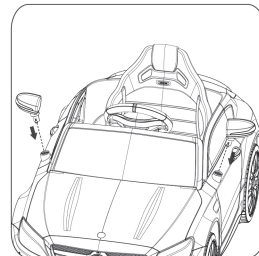

 5. Rearview mirror installation
Insert the left mirror on the left door, insert the right mirror on the right door.

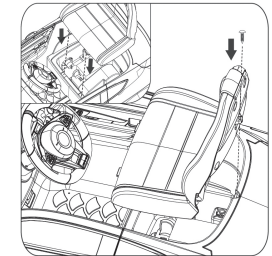

6.Seat installation
Put the seat in correct direction, insert the two hooks into the two holes. Lock the seat with one screw on the backside. (screw 4*14mm)

3

- Problem: unable to charge

Answer1: the battery plug-ins loose

Make sure the battery terminals have connected with the wires tightly.

Answer2: the charger is not inserted in place

Make sure the charger is plugged into the power outlet properly(ensure the power outlet switch turn on)

Answer3: the charger can not work normally

If the charger doesnot work, please contact the agent or manufacturer.

- Problem: vehicle run for a short time

Answer 1: the battery is not fully charged

The charging time is not enough, please charge in time after each use.

Recommend to charge 8 to 12 hours but not exceeding 20 hours.

Answer2: battery using age

Battery service life:1-3 years, otherwise, change a new one.

- Problem: charger makes a buzzing sound while charging

This is normal.

- Problem: charger heating phenomenon

This is normal. If the battery temperature is too high, please check either the current flow is too strong or battery internal short-circuit.

Note on Safety

1. This vehicle is not suitable for children under 36 months. Please use this vehicle under the supervision of adults.
2. Please keep this vehicle far from pool, highway, slopes or other dangerous places.
3. To avoid gearbox and motor damage, ensure the vehide has completely stopped when shift gears.
4. Before using, adults should check the main parts:battery, charger, wires, plugs,security risks. Any damage found, stop using until well repaired.
5. To avoid rust lubricate the iron parts with lubricating oil after using for some time.
6. The vehide should be kept away from fire and long-term light side-up for shortage, upside down.
7. Do not use the fuse not matching the product.
8. Do not change the wire system by yourself, the repair work must be carried out under the guidance of professionals and technical staff.

7

8