



WARNING

Protective equipment should be worn. Not to be used in traffic.



WARNING

Do not mix alkaline battery, standard (carbon-zinc) battery or rechargeable (nickel-cadmium) battery.



WARNING

This toy produces flashes that may trigger epilepsy in sensitised individuals.



WARNING

This product is unsuitable for children under 3 years due to its maximum speed.



WARNING

The remote control is not a toy. It is for the adult use only, and should not be used by a child. A close adult supervision is always required. Reception range may change significantly with weather, battery, and other environmental conditions.



WARNING

For the purposes of recharging the battery, only use the detachable supply unit provided with this toy.

Charger used with the toy should be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, it must not be used until the damage has been repaired.

Warning. This toy has no brake.

The toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.

Repair and Maintenance

- 1) The product contains electronic components and must not be used in water or in a damp environment. Clean it with a piece of wet cloth.
- 2) Rotating parts should be checked regularly, to see whether they are jammed by any sundries and to keep their normal lubricating state.

MADE IN CHINA

K07-SMS-150-051

051-01

Installation and Operating Instructions


BMW M6 GT3 Battery Operated Ride On



Please read the operating instructions carefully before use

The BMW logo and the BMW wordmark are trademarks of BMW AG and are used under license. They are used by Dongguan Chi Lok Bo Toys Company Limited under license.

Dimensions of entire car

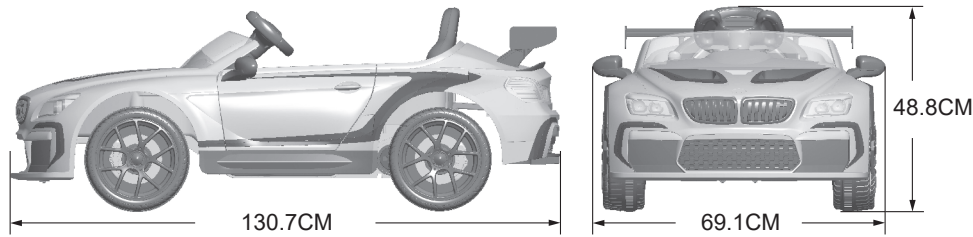

Contents

- I. Product Specifications and Parameters
- II. Components List
- III. Assembly Diagram
- IV. Installation and replacement of remote control batteries
- V. Function and Operation
- VI. Battery and Charger Operating Guide
- VII. Simple Fault Removal Guidance
- VIII. Warning

I. Product Specifications and Parameters

- 1. This product is suitable for the children of 3-6 years old, and should be used under adult supervision!
- 2. Product dimensions: 130.7×69.1×48.8CM
- 3. Product maximum load weight: 30 kg
- 4. Product speed: low and high speed when in foot pedal mode (load weight: 30kg), low speed: 2.5km/h; high speed: 4.2km/h; Back gear: 3.4km/h
- 5. Product driving motor: DC 12V (550 dual drive)
- 6. Product charger: input AC 100-240V (50/60Hz), Output DC 15V/0.8A/1A
- 7. Product rechargeable battery: DC 12V/7AH (1 piece), about 200 cycles of charging and discharging
- 8. Remote control and manual switching functions, 2.4GHz one-to-one remote control function
- 9. Remote control DC power supply: 2×1.5V AAA batteries (not included in this product)
- 10. Product operating ambient temperature: 0-40 °C
- 11. Basic frequency: 2.4-2.4835GHz
- 12. Transmission power: less than 10dBm

VIII. WARNING

1. Battery warning:

- 1) If the product is not used for a long time, please fully charge the battery and then turn off the power switch for storing the car. The battery shall be recharged once every other month, otherwise the battery service life will be shortened or the battery cannot be charged again.
- 2) Pay attention to the positive and negative poles of the battery during installation (the reverse connection or short circuit of the positive and negative poles of the battery is not allowed to occur).

Battery warning:

- 1) This product needs to be provided with two DC 1.5V AAA batteries (not included in this product).
- 2) Pay attention to the positive and negative poles of the battery during installation (the reverse connection or short circuit of the positive and negative poles of the battery is not allowed to occur).
- 3) Rechargeable batteries charging operation can be carried out only by adults.
- 4) Non-rechargeable batteries cannot be charged.
- 5) The rechargeable batteries can be charged only after being taken out from the remote control battery compartment.
- 6) Please do not mix different types of batteries or used batteries and new batteries.
- 7) If this product has not been used for a long time, the batteries shall be taken out from the remote control battery compartment.
- 8) Exhausted batteries are to be removed from the toy.

2. Product warning:

- 1) There may be potential sharp edges, sharp points or small parts before the assembly of this product, and therefore this product shall be assembled by the adult.
- 2) To avoid suffocation, keep the plastic bag away from children. Dispose of all bags immediately.
- 3) The children shall correctly use the car under the adult guidance and supervision, otherwise they may make themselves or the others injured.
- 4) The car is suitable for being driven on the flat ground and strictly prohibited to be driven in such dangerous places as street, road, sleep slope and beside swimming pool, otherwise the traffic and drowning accidents may occur.
- 5) Please put on shoes and protection equipment before use, such as fastening the safety belt and putting on the helmet, gloves, knee pads, etc.
- 6) Small parts possibly fall off when this product is used improperly. So, it is unsuitable for children under 36 months old.
- 7) Regularly check whether the battery, charger, wire, plug, casing and other parts are damaged; if the damage occurs, please cease to use this product until it has been repaired.
- 8) This product is only allowed to be used by a child; the maximum load is 30kg, and therefore the overload is not allowed.
- 9) Keep away from fire.
- 10) The product instructions shall be kept as they contain important information.

3. WARNING:




WARNING

To reduce the risk of injury, adult supervision is required.
Strictly forbidden using on the roadways, near motor vehicles, slopes, swimming pools and where there is water;
Please wear shoes; this toy car can only be used simultaneously by one person.
Keep away from kids before assembled by adult, as there are potentially sharp edges, points, or small parts.

VI. Battery and Charger Operating Guide

1. The charging socket is located at the lower part of the car seat.
2. The battery and charger which are provided or recommended by Chilokbo can be used only.
3. Please do not play with the charger and battery because they are not toys.
4. The battery charging operation is carried out only by adults but not children.
5. The color of the charging status lamp in the charger is red during charging and turns green after being fully charged.
6. The battery shall be fully charged before first use; the battery charging time shall be 9-10 hours and can not exceed 12 hours.
7. The red light on the display indicates low battery and needs to be charged.
8. The lukewarm phenomenon of the charger and battery will occur during charging.

Power Supply	Chargeable type	
Battery specifications	DC 12V/7AH	
over-current protection	13A	
Charging Source	Input AC 100V-240V 50Hz/60Hz	Output DC 15V/0.8A/1A
Battery charging time for every time	Charging Time:9-10 hours	Utility time:1-2 hours


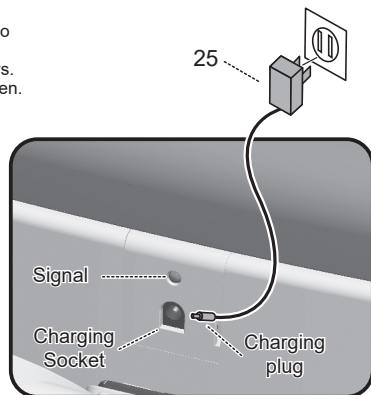


VII. Simple Fault Removal Guidance

Defective conditions	Key points for examination
1. The car cannot be started.	1) Check if the battery is fully charged, you can observe the display of the central control panel whether the voltage is above 12V or not. 2) Check the power switch, all plugs of the control plate under the seat, and the battery terminal line are properly inserted. 3) Examine whether the circuit of overcurrent protector is automatically shut off (the circuit is shut off for protection of motor and control panel in case of car load or blocking, overcurrent protection). 4) Whether the car is stored for a long time without application and the battery is not charged on schedule. 5) If the remote control cannot start the car, please check whether the remote control code-matching function is normally operated. 6) Check whether the remote control battery power is low.
2. Music sound is distorted or silent	Check whether the battery power is enough, and charge or replace the battery if not.

Operation of overcurrent protector

- 1) The overcurrent protector is installed under the seat and can be seen by twisting the seat screw (detaching as shown in the figure).
- 2) When the car is overloaded, the overcurrent protector automatically disconnects the circuit (for protecting the circuit); when the circuit fault is removed, the overcurrent protector automatically connects the circuit.
- 3) When the battery has power and the car can not run, please check whether the circuit of the car has an open circuit or short circuit.

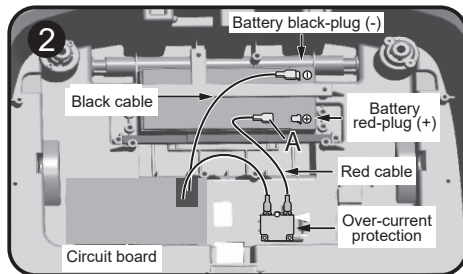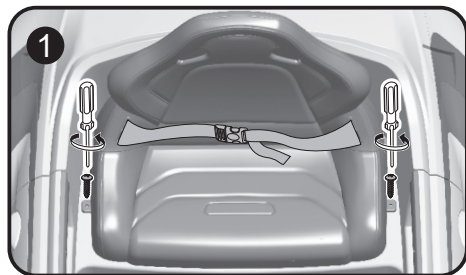

WARNING


Fire danger! The overcurrent protection is only limited to 13A.

II. Components List





1. Car Body	10. Seat backrest	19. Rear-view mirror screw (3×12PAB) 4PCS
2. Windshield	11. Tail wing	20. Front axle frame connecting rod locknut (5MM) 2PCS
3. Steering Wheel	12. Front axle frame connecting-rod	21. Steering wheel locknut (5MM)
4. Rear-view mirror	13. J-shaped stick	22. Φ8 Gasket 4PCS
5. Hand shank	14. Rear wheel axle	23. Φ10 Gasket 2PCS
6. Wheel 2PCS	15. Front axle frame connecting-rod screw (5×13PM) 2PCS	24. Front and rear wheel fixing nuts (8mm) 4PCS
7. Driving wheel (With rubber wheel sleeve) 2PCS	16. Steering wheel screw (5×33PM)	25. Charger
8. Wheel cover 4PCS	17. Seat and backrest screw (4×15TAB) (D=7.5) 4PCS	26. Remote Control
9. Seat	18. Steering gearbox screw (3×10 PWAB) (D=10) 2PCS	27. M8 Wrench 2PCS

III. Assembly Diagram

1. Installation of front axle frame connecting-rod and wheel

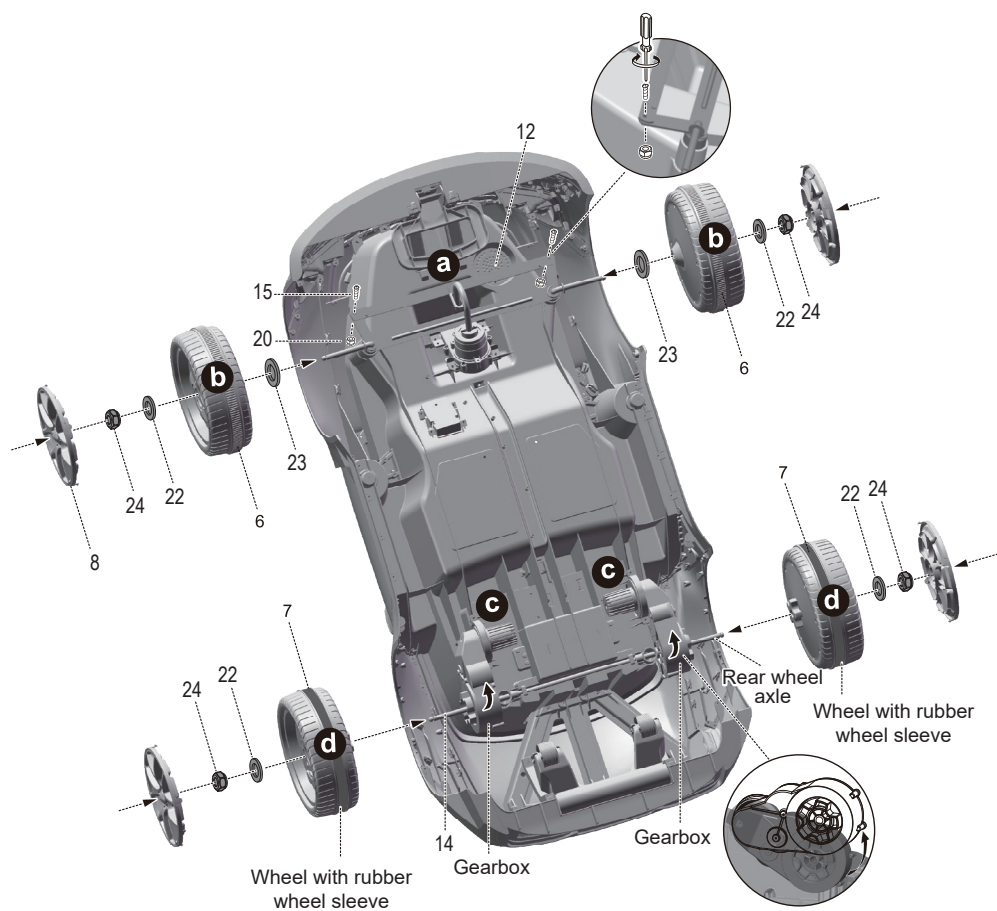

- a** Install the front axle frame connecting-rod (part 12) at the assigned location, and then tighten it with the front axle frame connecting-rod screw (part 15) and locknut (part 20). (The tightening degree shall be based on the flexible swing direction.)
- b** Install the washer (part 23), front wheel (part 6), washer (part 22), nut (part 24), and small wheel cover (part 8) onto the front axle in sequence, and use the wrench (part 27) to tighten the nut.
- c** Rotate the motor gearbox upwards according to the direction indicated by the arrow until the motor gearbox hole aligns with the car body axle hole, and then insert the rear axle (part 14) into the assigned location of the car body.
- d** Install the rear wheel (Part 7), washer (Part 22), nut (Part 24), and small wheel cap (Part 8) onto the rear axle in order, and use the wrench (Part 27) to tighten the nut.

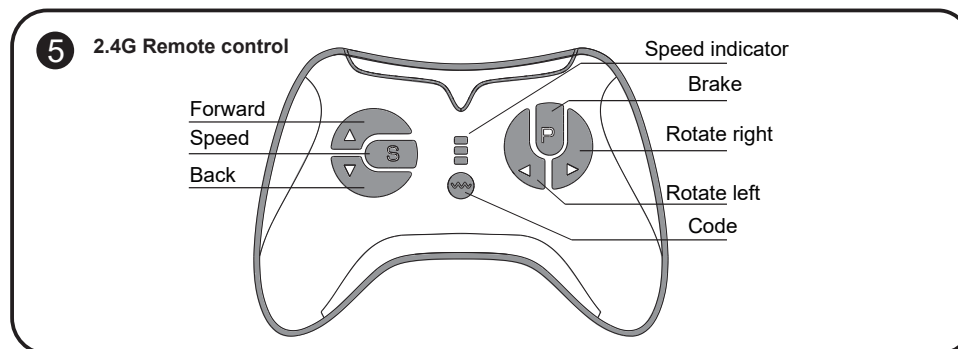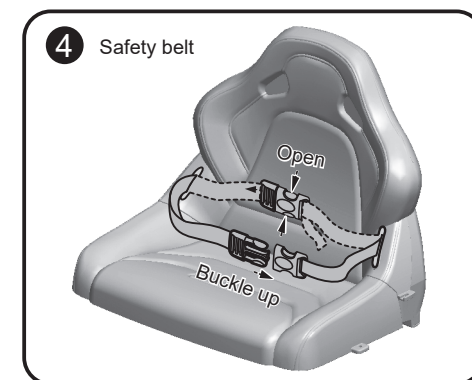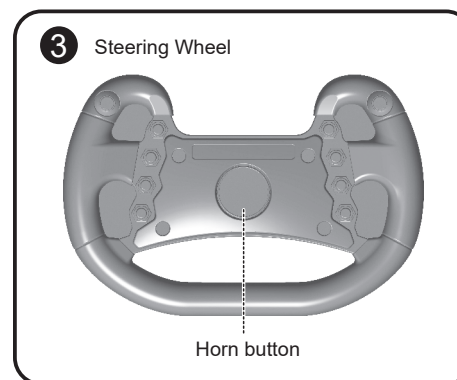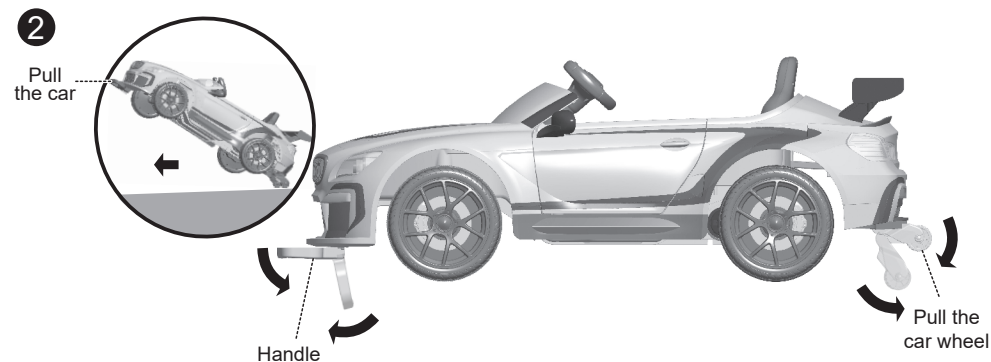


- 1) One-button start button: ① Press this button to turn on the main power switch, the system is in the standby state, and the speaker make a car engine sound. One-button start button red light and the pedal/low speed button green light are on, and the normal voltage is displayed after the end of the engine sound.
② After pressing this button for 2 seconds, the main power will be cut off and the system will be shut down.
- 2) Music button: Under MUSIC play mode, press this button to play a song, and press twice for next song and the green light of this button is on; there are two music buttons, each button will play three songs repeatedly.
- 3) Previous/Volume - Button: In MUSIC USB BT mode: Press this button shortly, the green light of this button will be on for a short period of time and it will change to the previous music; when long press this button for two seconds without release, the green light of this button will be on, the volume will be decremented.
- 4) Next/Volume + Button: MUSIC USB BT mode: Press this button shortly, it will switch to the next music; long press this button for two seconds, the green light of this button will be on, and the volume will increase progressively.
- 5) Lamp button: It is in off status when power-on. Press to turn on the car lamp, and the green light is on; press again to turn off the car lamp and the button green lamp is off.
- 6) Pedal/low speed button: ① The power-on default mode is pedal/low-speed mode and the green light of this button is on. Step on the pedal to drive at a low speed and , and release the pedal to slowly brake and stop. Normally, you can press the emergency brake button on the remote control to stop the brake even the car is in foot-pedal mode, that means in the state of the emergency brake, the car cannot be driven by stepping on the pedal. ② Safety protection function: When you step on the pedal to start or switch from the remote control mode to the low speed mode, you must first release the pedal and then step on it again to drive.
- 7) Pedal/high speed button: ① Press this button to switch to the pedal/high speed mode and the green light is on, then step on the pedal to drive at high speed, and release the pedal to slowly brake and stop. Normally, you can press the emergency brake button on the remote control to stop the brake even the car is in foot-pedal mode, that means in the state of the emergency brake, the car cannot be driven by stepping on the pedal. ② Safety protection function: When you step on the pedal to start or switch from the remote control mode to the high speed mode, you must first release the pedal and then step on it again to drive.
- 8) Remote control button: Press this button, the system will switch to remote control mode, and the green light will be on; then use the remote control to start the car. (At this time, the car can't be started by only stepping on the accelerator pedal!)
- 9) Steering wheel button: The middle is the horn sound button, which will be sounded in any audio playback mode; press and hold this button, the horn will sound continuously.
- 10) Display screen: ① The middle four digits display the voltage of the battery in real time; (7 lights: 4 green lights, two yellow lights and 1 red light). All lights on indicates full battery; as the voltage decreases, the lights go out one by one, leaving only the red light on, indicating low battery and requiring charging; when the red light is flashing, means that the low voltage protection is activated and the device will shut down!
② The function icons on both sides of the display are "MUSIC, USB, BT, V, ►, II", and the mode or state in which it is in will be displayed by its corresponding icon.
- 11) USB/Bluetooth function: ① When the control board is on, will keep internal music mode and the music will be played when pressing the button. ② After connecting USB, the "U" is on display will be always on, and then the audio file in the USB can be played automatically. After taking out the USB, the "U" is out and change back to auto music mode, can play the internal music when pressing the button. ③ When disconnected the USB, the Bluetooth is online always and when connected, "BT" is on display always and can play the audio file inside the Bluetooth connector. After disconnecting the Bluetooth, the "BT" is out and change back to auto music mode, can play the internal music when pressing the button. The Bluetooth function can only be connected or disconnected from the connector. ④ When the USB device is inserted, the bluetooth cannot be connected. In other words, USB device has priority. ⑤ Name of Bluetooth: CHILOKBO.
- 12) Low voltage protection function: When the voltage is as low as 8.0V, the central control board will automatically power off, and the car will stop automatically. Please charge as soon as possible!
- 13) Charging and power-off function: When charging the car, the central control board will automatically power off. All functions will be turned off, and the car cannot be started!

3. Normal operation:

- 1) Foot switch mode:


A. Press the main power switch button	B. Press the foot switch button
C. Select forward/reverse direction	D. Use the foot pedal to start the car
- 2) Remote control code-matching operation:
The first use requires the operation of code-matching. This product has a memory function, so there is no need to re- code when changing the battery next time.
Step 1: Keep pressing "M" button for more than 3 seconds until the LED lamp is twinkling.
Step 2: Turn on the device power, and the first steady LED light will turn on, indicating that the code is successful.
Step 3: When the remote control is limited to 10 seconds, it will automatically enter the standby mode. Pressing any key will restart it.
- 3) Remote control function:
"▲" Forward button "▼" Backward button "◀" Turn-left button "▶" Turn-right button
"S" Speed change button "P" Sudden brake button
Press "S" button to set up the speed, the LED lamp is on means low speed, when two LED lamps are on means middle speed; when three LED lamps are on means high speed.
Press "P" to keep the sudden brake status, all lights are on, when press again the "P" button will release the brake status.

2. Installation of J-shaped stick

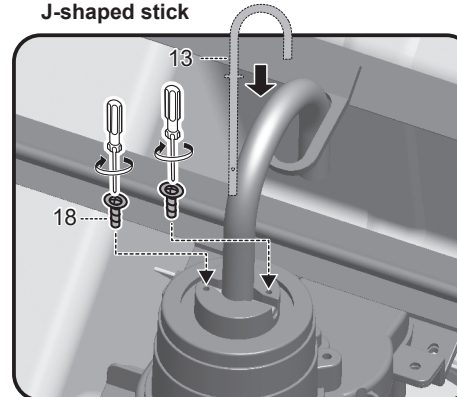


Insert the J-shaped iron hook (part 13) into the designated gearbox at the front of the car. Then tighten with the hole specified by the steering gear box screw (part 18).


3. Installation of rear-view mirror

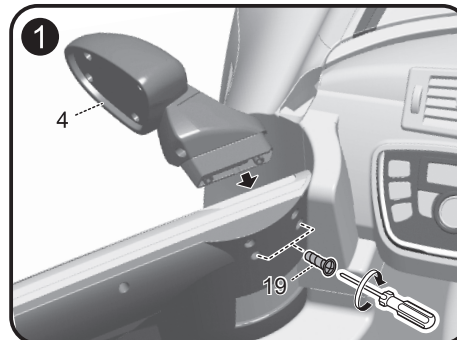


Open the door, install the inverted mirror (part 4) in the specified position, and tighten the inverted mirror with screws (part 19) as shown.

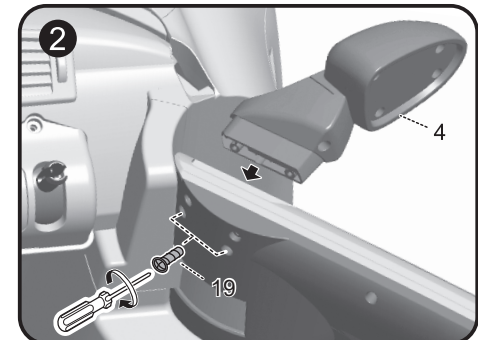

4. Installation of steering wheel and hand shank

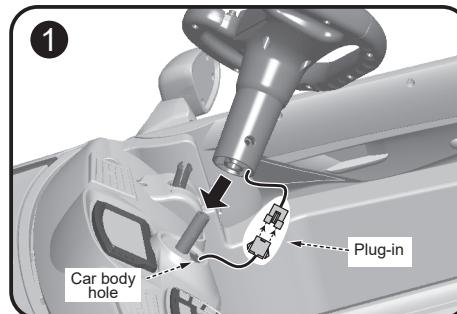


Plug the wire plug of the steering wheel into the wire plug from the car body hole correspondingly, and then put the connected plugs into the car body hole.

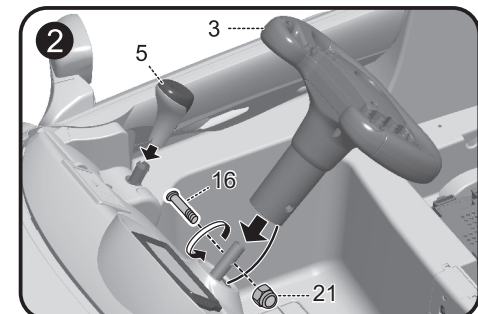


Install steering wheel (part 3) on J-shaped hook, then tighten with the steering wheel screw (part 16) and steering wheel locknut (part 21), then insert the handle (part 5) into the specified position and press down to connect firmly.

5. Installation of power supply and seat

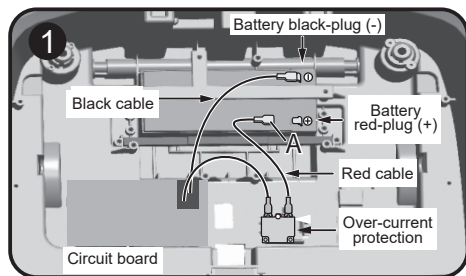


Insert plug A into the positive terminal of the battery.

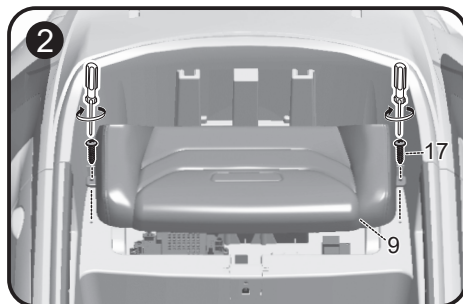


Put the seat (part 9) into the assigned location of the car body after the installation of power supply, and tighten it with the seat screw (part 17).

6. Installation of windshield and tail wing

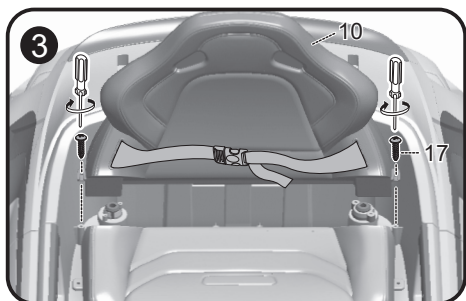


Put the seat backrest (part 10) into the assigned location of the car body as shown in the figure below, and tighten it with the seat backrest screw (part 17).

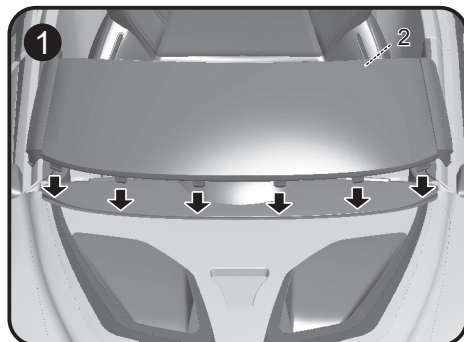


Install the windshield (part 2) at the specified position on the front of the car. Before the installation, fix the position of each buckle and press until it is firmly fastened.

7. Open the car door

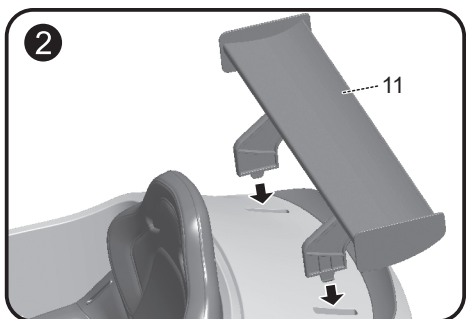



Insert the rear wing (part 11) at the direction shown by the arrow, and insert the corresponding buckle, and press the buckle firmly until it is fastened.

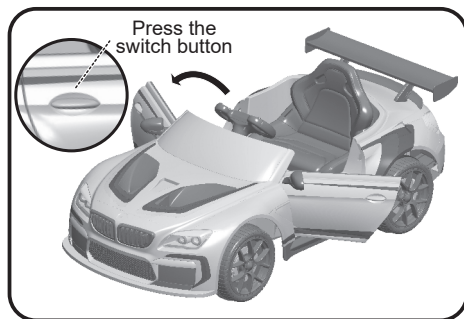

Press the switch button outside the vehicle door plate and then pull the door outward to open it.

IV. Installation and replacement of remote control batteries

2.4GHz Remote Control

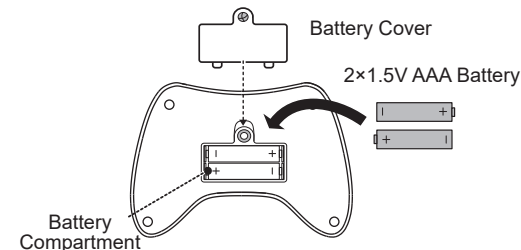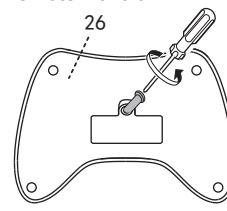


Unscrew the battery cover screws of the remote control (part 26), open the battery cover, find the positive and negative poles, put 2 AAA batteries into the battery compartment, close the battery cover and fix it with screws.

V. Function and Operation

1. Main functions:

- 1) There is a remote control/foot switch button
- 2) Postposition dual drive: Two 12V motor gearboxes can provide the strong "front or rear" power.
- 3) Forward/backward function: The right side of the dashboard is provided with the three forward gears for speed regulation, neutral gear and reverse gear (each gear has LED lamp display function.)
- 4) Foot switch function: Press the foot switch button, when the handle is in forward or backward position, step down the foot switch to move the car forward or backward, and release the foot switch to stop the car.
- 5) Charging protection function: All functions needing to be powered by the battery will fail when the battery is being charged.
- 6) Forward/backward brake function: No matter what the forward or backward is operated, there will be the relay brake function during stop.
- 7) Turn out the auxiliary car-pulling wheel at the car tail bottom, and then turn out the handle at the car head bottom so as to pull the car.

2. Functions on the central control board:

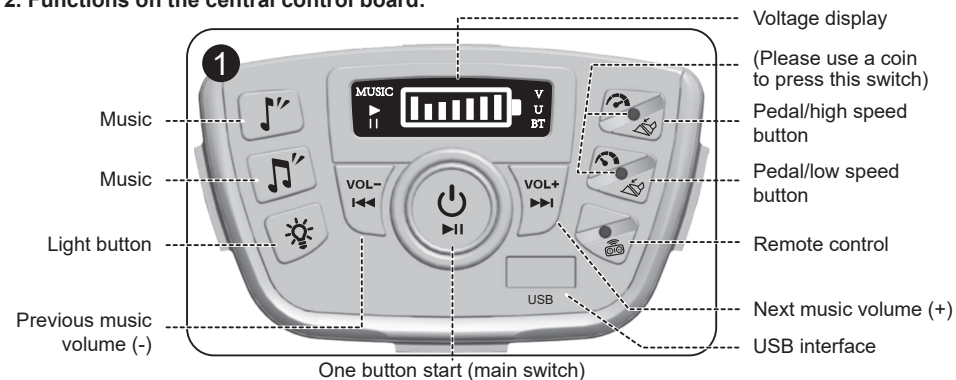

Please use a coin to press the button (remote control button, pedal button) on the main control panel.