901常规说明书 221027-新版
142x210mm

3~6 years

Item No: 901
Electric Ride-On

Installation & operation Manual

⚠CAUTION:
- The package contains small parts
- Adult assembly required
- Remove all plastic bags and package ties prior to giving to children
- Protective equipment recommended
- Not to be used in traffic
- Keep this instructions for future reference

⚠ WARNING
ADULT ASSEMBLY REQUIRED.

©2022 Caterpillar. CAT,CATERPILLAR,and their design and marks are registered trademarks of Caterpillar Inc.
Ningbo Prince Toys Co.,Ltd., a licensee of Caterpillar Inc.

I.SPECIFCATIONS.

Suitable Ages	3~6 years
Product Dimensions	110X70.5X61.5 cm
Maximum Weight	30 kgs
Speed	3~4km/h
Motor	30W
Charger	DC 6V500mA/12V500mA
Battery	6V7AH/12V4.5AH
Remote Control	2.4G one to one function
Remote Control Batteries	2XAAA Size(not included)
Steering Wheel Batteries	2XAA Size(not included)
Operating Ambient Temperature	0~40℃

II.Components List.

1.Truck body 1pc	2.Steering wheel 1pc	3.Seat 1pc
4.Cab top 1pc	5.Front wheel 2pcs	6.Rear wheel 2pcs
7.Wheel cap 4pcs	8.Hopper 1pc	9.Hopper axle cover 2pcs
10.Shovel 1pc	11.Hook 2pcs	12.Big cotter pin 5pcs (1 replacement piecce)

13.Small cotter pin 3pcs (1 replacement piece)	14.Washer 7pcs (1 replacement piece)	15.Magaphone 1pc
16.Motor (1pc single motor) (2pc Dual motor)	17.Spacer 1pc(only for single motor model)	18.Hopper axle 2pcs
19.Rear wheel axle 1pc	20.Front wheel axle 1pc	21.M8 nut 4pcs (1 replacement piece)
22.M4X12 screw 9pcs (1 replacement piece)	23.M3X10 screw 5pcs (1 replacement piece)	24.Tool 1pc
25.Charger 1pc	26.Remote control 1pc	

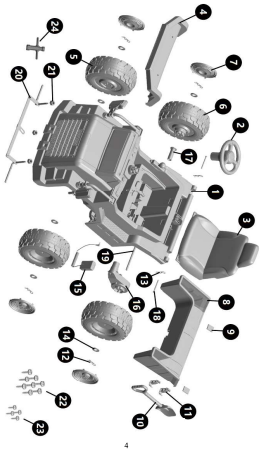

III.Assembly Instructions.



1.Cut the belt and take the front wheel axle.



2.Place the front wheel axle as the picture show



3.Tighten the M8 nut with the tool provided.



4.Insert the two washers first together with the two front wheels,tighten using a washer and a big cotter pin,then cover the wheel cap.



5.Insert the rear wheel axle as picture show.



6-1(only for single motor)Plug the wire plug and insert the connected plug into the hole and place the motor in the position.



6-2(only for Dual motors)Plug the wire plug and insert the connected plugs into the hole and place the two motors in the position.

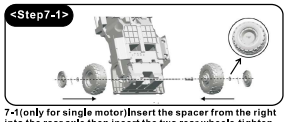

7-1(only for single motor)Insert the spacer from the right into the rear axle then insert the two rear wheels,tighten using a washer and a big cotter pin,cover the wheel cap at the end..png.folderdownload.

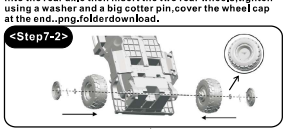

7-2(only for dual motors)Insert the two rear wheels,tighten using a washer and a cotter pin,then cover the wheel cap.



8.Place the cab top and tighten by four M4x12 screws with a screwdriver(not included).

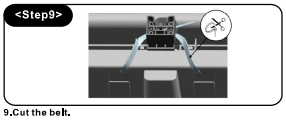

9.Cut the belt.

10.Place the hopper in the right position,tighten by four M4X12 screws with a screwdriver(not included).



11.Insert the hopper axles,tighten using a small cotter pin as picture show.



12.Assemble the hopper axle cover.



13.When the battery is installed,insert the red cable terminal into the battery positive pole.



14.Place the seat into the body,then tighten by two screws with a screwdriver(not included).

15.Press the button and insert the steering wheel.



16.Insert the megaphone and place it in the postion.



17.Place the hook in the postion and tighten by two M3X10 screws with a screwdriver.



18.Place the shovel.

IV.BATTERY CHANGE.

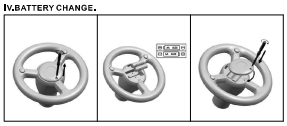

V.Function and Operation.

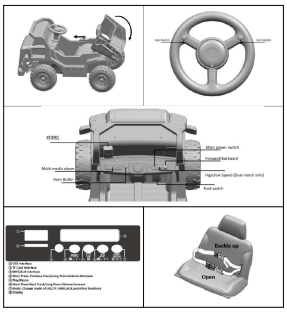

VI.Charging the Drive Battery.

1. The charging socket is located at the lower part of the car seat.
2. Only battery and charger which are provided or recommended can be used only.
3. Please do not play with the charger and battery because they are not toys.
4. The battery charging operation is to be carried out only by adults.
5. The battery shall be fully charged before first use; the battery charging time shall be 8~10hours and can not exceed 18 hours.
6. It is normal for battery and charger to feel warm during charging.



VII.Simple Problem Diagnostic.

Detective conditions	Key points of inspection
1. The car can not be driven.	1) Ensure the power switch, all plugs of the control plate under the seat, and the battery terminal are properly inserted.
	2) Ensure the over current protector, when the car is over loaded or blocked, the over current protector automatically disconnects the circuits to protect the motor and controlling IC board.
	3) Check whether the car has been stored for a long time and its battery is not charged on time.
	4) If the remote control cannot start the car, please check whether the remote control code-matching function is normally opened.
	5)Check whether the remote control battery power is low.
2. Music sound is distorted or silent.	Check whether the battery has enough power, otherwise charge fully.

VIII.WARNING.

1.Battery warning:

1.)When storing the car for long period of time, charge the battery until full then turn off the power switch. The battery should be recharged once every other month, or may otherwise have a shorter life span and risk deteriorating.
2.) When installing the battery, it is important that the positive and negative poles are correctly connected. Short circuiting of positive and negative poles may result in damaging the toy.

Battery warning:

1) Product needs to be operated with two DC 1.5V AAA batteries (not included) and two DC1.5V AA batteries(not included).
2) Battery charging is recommended only to be done by adults.
3) Rechargeable batteries charging operation can be carried out only by adults.
4) Non-rechargeable batteries cannot be charged.
6) The rechargeable batteries can be charged only after being taken out from the remote control battery compartment.
6) Please do not mix different types of batteries or used batteries and new batteries.
7) If product will be stored for a long time, it is recommended to remove batteries from battery compartment.
8) Over used batteries should be removed from toy.

2. Product warning:

1) There may be potential sharp edges, sharp points or small parts before the assembly of this product, and therefore this product shall be assembled by the adult.
2) To avoid suffocation, keep the plastic bag away from children. Dispose of all bags immediately.
3) Children shall use the car under adult guidance and supervision to prevent risk of injury.
4) The car is suitable for being driven on the flat ground and strictly prohibited to be driven in dangerous places such as public roads,slope and near swimming pool to prevent traffic and drowing accidents.

5) Please put on shoes and take protective measures before use,such as fastening the safety belt and putting on the helmet, gloves, knee pads, etc.
6) Not suitable for children under 36 months as parts may fall off when used improperly.
7) Regularly check whether the battery, charger, wire, plug, casing and other parts are damaged; if the damage occurs, please cease to use this product until it has been repaired.
8) This product is only allowed to be used by one child, the maximum load is 30kg, overloads is not allowed.
9) Keep away from fire.
10) The product instructions shall be kept as they contain important information.

IX.Remote Control Instructions.

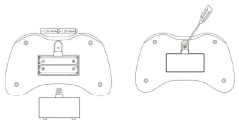

Loosen the screw with a screwdriver,and put 2 AAA batteries into the battery house.
Cover with a battery cover and light with a screw

① Forward/Backward button
② Turn-left/right button
③ Sudden brake button
④ Speed change button
⑤ Frequency bind button



Operation manual: For the first time to use Need to frequency bind.

- Take out the remote control, install the battery
- Long press on the button "M" for 2~4 seconds, indicator light will flash

- Turn on the power of the car, when the indicator light flashes turn to long lighting, then frequency bind is successful.
- If the frequency bind failed (indicator light flashes) , remove the battery and repeat steps 1~3.
- When remote control is not operated after 10 seconds, indicator light will turn to power saving mode.
- Button Description:△ forward▽backward◁ turn left ▷turn rights.Speed P:emergency brake, when pressed, the car will come to a stand still. Press again to release break.

3. WARNING:

⚠ WARNING

Adult supervision required to reduce the risk of injury;
Strictly forbidden to use on roadways, near motor vehicles, slopes or swimming pools and areas where there is water;
Please wear shoes when operating vehicle;
Can only be used by one person at a time;
Keep away from children before assembled as there may be sharp edges points or small parts.
Adult assembly required.
A reminder that the toy should be used with caution since skill is required to avoid falls or Collisions causing injury to the user or third parties.

⚠ WARNING

Do not mix alkaline battery, standard (carbon-zinc) battery or rechargeable (nickel-cadmium) battery.

⚠ WARNING

Protective equipment should be worn.Not to be used in traffic.

⚠ WARNING

This product is not suitable for children under 3 years of age due to its maximum speed.

IX. Care and Maintenance

1)Regularly wipe and clean it with a piece of cloth.
2) The rotating parts of the car should be checked regularly to determine whether any foreign matter obstructs the rotation and to keep lubricating state of normal operation.