



Installation and Operation Instructions

Forward and backward operations by manual shift

Techniques of volume regulation and MP3 amplification function

Battery power display

*Max weight: **30** kg.



IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

ASSEMBLY INSTRUCTION

**A** x 1

Boby

**B** x 1

Handlebar

**C** x 1

Front Axle

**D** x 4

Wheel Cover

**E** x 1

Backrest

**F** x 1

Rear Axle

**G** x 1

Steering Rod

**H** x 2

Front Wheel

**I** x 2

Rear Wheel

**J** x 1

Dashboard

**K** x 1

Charger

**L** x 2

Wrench

Product Specifications :

Battery: 12V7AH/12V10AH/12V14AH

Drive Motor: 12V540*2/4(10000RPM)

Suitable age: 37-95months

Maximum weight: 30kg

Car Size: 103*65*73cm

Speed: 3-8km/h


Hours of Use: Using 1-2 hours after Charging 8-10hours

Charger: Input: 100V-240V Output: 12V1A/12V1.5A

Analytic graph



Function

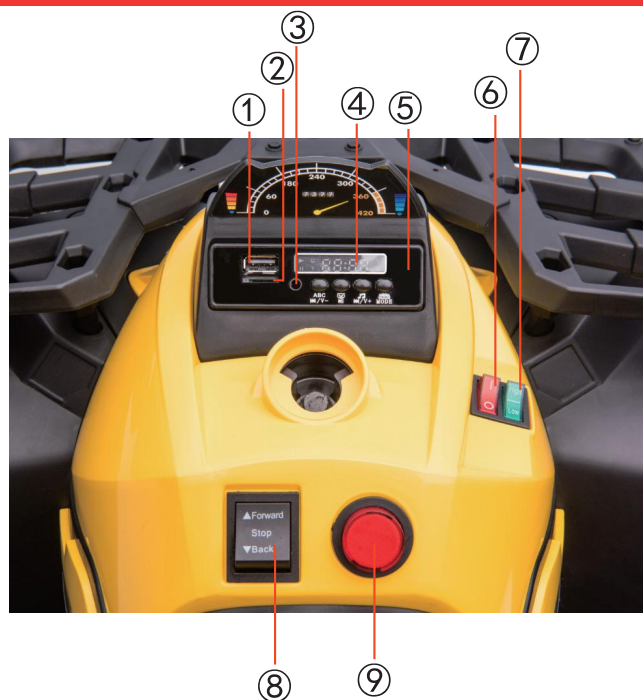

Function indication

- | | |
|-----------------------|---------------------------|
| ① USB | ⑥ Light Switch |
| ② TF | ⑦ Speed Switch |
| ③ MP3 | ⑧ Forward
Stop
Back |
| ④ The voltage display | ⑨ Power Switch |
| ⑤ Multi-Media | |


1. Install the Steering Rod and Front Axle

Turn the body over, bottom up. There are 11 screws in front axle mounting and steering lever holding position. Remove them with a screwdriver. Pierce the steering rod into the fixing hole and lock the fixing part with 3 screws. Install the front axle assembly in alignment, lock and fix it with 8 screws.



2. Install the shock absorbers

Lift the rear drive motor assembly, locate the long screw and remove it along with the four gaskets and one nut preinstalled on it. The screw passes through gasket, shock absorber, gasket, body, gasket, shock absorber, gasket, nut, tighten with wrench.

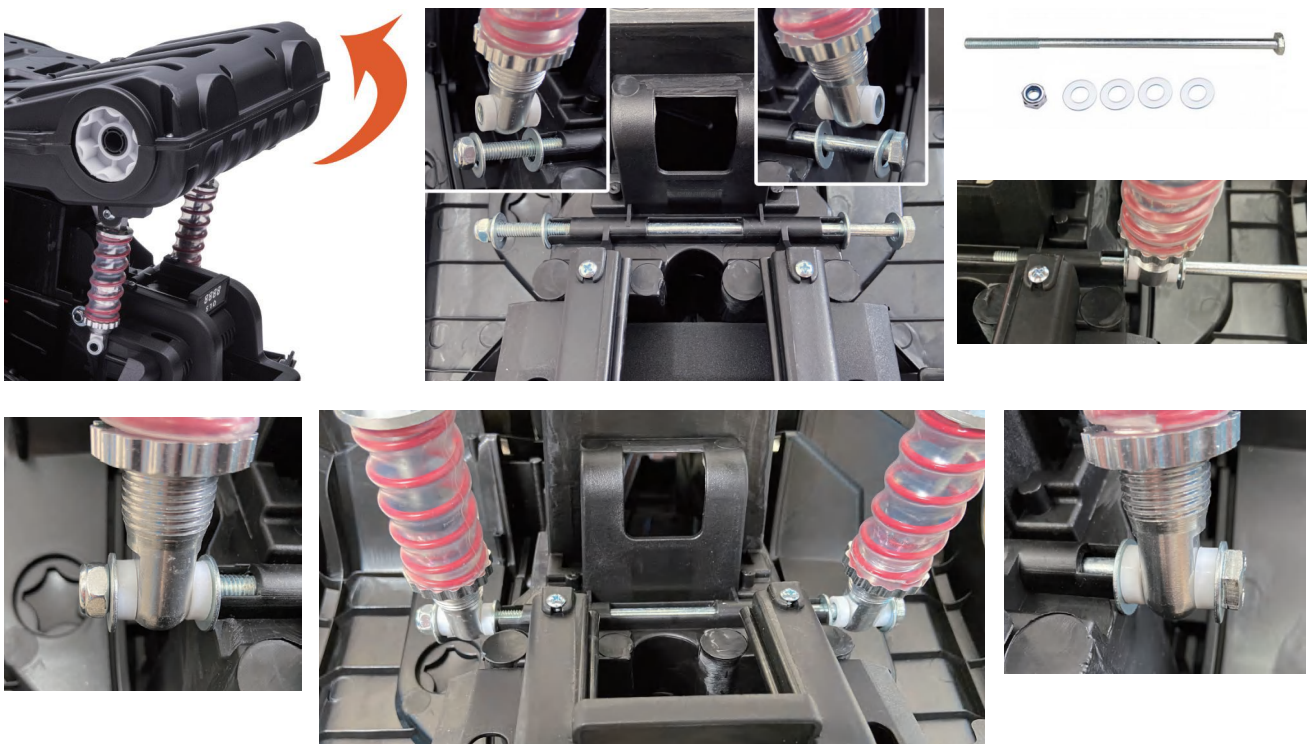

3. Install the rear wheels

Remove the nuts and gaskets on the rear axle, pass the rear axle through the motor assembly. Install the rear wheel, gasket and nut on the left and right sides of the rear axle and tighten with wrench. Fit the wheel cover into the hole in the wheel.




4. Install the front wheels

Remove the nuts and gaskets on the front axle, install the front wheel, gasket and nut on front axle and tighten with wrench. Fit the wheel cover into the hole in the wheel. Install the front wheel on the other side in the same way.



5. Install the dashboard

Connect the two cables of the dashboard to the body, and then align the dashboard to the position on the body and clamp it.

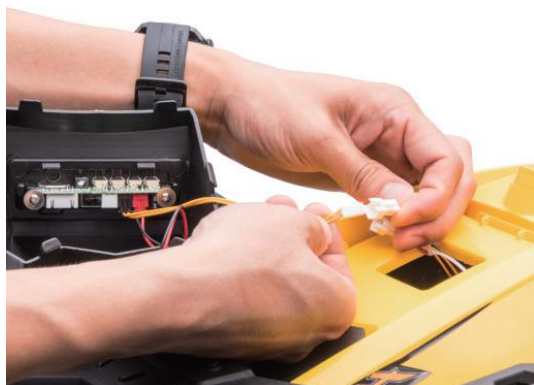


6. Install the handlebar

First, remove the screw and nut from the handlebar connector, insert the handlebar connector into the steering rod, pass the screw through the fixing hole and lock the nut.



7. Connect the power cord

First remove the seat, find the red power cord, plug it into the battery positive port, turn on the power switch, check and confirm the connection, and then install the seat back

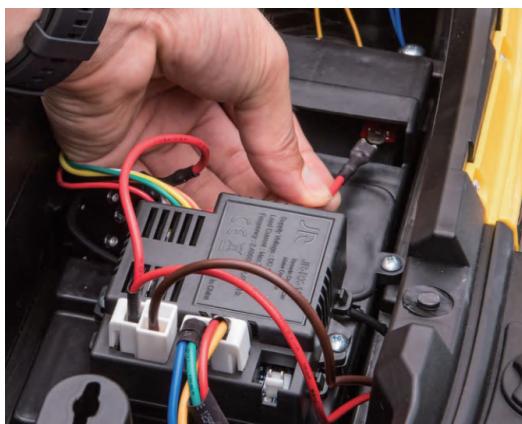

8. Install the backrest

Align the backrest with the hole on the body and fix it.



WARNING

Only adults can install parts and adjust the car, keep moving parts out of children's reach. Children under 36 months cannot use the toy car as it has many small parts.

Children must keep the car away from the fire.

Children can use the product only in the company of adults, and the adult should not leave during the process.

Never let Children stand or play onto the pedal or in the car.

Only adults can complete storage battery charging, and must charge the product before its first use. Keep such package materials as plastic bags out of children, or they will suffocate or kill children.

Never use parts provided by non-manufacturers. Never let children play with the charger.

The number of connected power by the product can never be over the recommended number.

Notice of use:

Not to be used in traffic.

Never use the product in such dangerous zones as street, road, slope or drain.

Never change the circuit and additional electric devices.

Never use remote control in rainy days or in the water, never pour water or other liquid into the car, keep the product out of the fire, otherwise the car will be damaged,

Only one child can use the product and its weight cannot exceed 30KGS.

Turn off the power when not in use and remove battery connector when not using it for a long time.

As the product has battery charger, check whether wire plug shell and other parts are damaged or not, and fix those damaged parts.

The product must be assembled by the adult!


Before assembling, screws and pins are dangerous sharp points.

Charging steps are as follows:

Step 1 :The charging hole is under the steering wheel

Step 2: Put the charger plug into the plug hole.

Step 3: Connect the charger to the power socket.

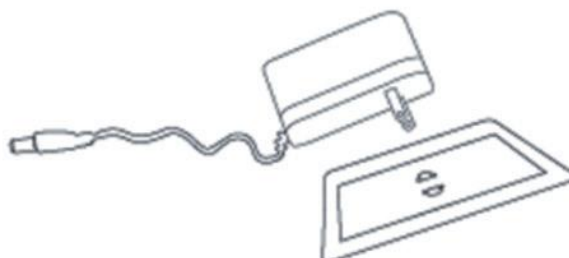

Warning: Car must be charged by adults only. Car is useless during charging

Trouble Clearing

Type	Analysis	Solutions
The car cannot get started.	Low battery voltage; Protection of electric devices; Failure to press the switch button correctly; Falling of power connector; Battery breakdown; Damage of electric devices; Generator breakdown;	Charge battery fully; Use the car a few minutes later; Use the car according to instructions; Install the connector again; Change battery; Change electric devices; Change generator.
The battery cannot be charged.	Falling of battery connector; No charging for the charger; Charger breakdown;	Install the connector again; Plug the charger again; Change the charger.
The car has a short range.	Not full charging of battery; Much-used battery;	Charge fully the battery again; Change the battery.
There appear slight noise and heat of the car in charging.	Chemical reactions;	Normal reactions
The car has a slow speed	Much-used battery; No electricity for battery; Overload; Uneven driving surface;	Change the battery Charge fully the battery again Reduce the load below 30 kilograms Drive on uneven surface

Charging notice

Charge storage battery less than 10 hours, or the storage battery will be damaged forever. In charging, put DC Plug into the power socket, put charger into power plug; never use the product during charging it.

The product can be used for one hour and the charging time is 8-10 hours, exceeding no more than 18 hours.

It is common for charger and storage battery to have not become heated (temperature under 60 degrees) in charging.

Never use the connector with the water, or short circuit will happen.

Use the product's own charger, otherwise it will cause damage to the charger and battery or short circuit.

Charge the product when not using it for a long time.

Maintenance and service

Before use children's parents should check whether charger's wiring, plug, shell and other parts are damaged, and fix those damaged parts.

After using the product for a time, parents should lubricate iron castings with lube, or those castings will get rusted; they should keep the product out of fire and lay it flat in dark places; they should put the product inside the house or cover it with one water-proof cloth in wet weather.

Parents should keep the product out of such hot objects as stove and heater, or its plastic parts may be thawed; they should keep the product out of combustible objects in charging, or the fire may happen.

Parents should clean car surface with one dry cloth, or clean plastic parts with non-waxy furniture polish; they should not clean plastic parts with chemical solutions or clean the car with water; children should not drive the car in wet or rainy weather, or the car's generator, circuit system and battery will be damaged.

When not using or laying the product, parents should cut off car power, keeping all the switches into "STOP" or "OFF" model.

Parents should not use the fuse which doesn't conform with the agreed specifications.

Parents should not change product structure and circuit system, and should have the product checked and fixed by professionals or under the guidance of professionals.

